

Part Description 部件名称	Part Number 件号	OEM 原始设备制造商	Model 机型	Description 工作内容
Coupling Adapter	109-0101-03-1, 109-0101-03-103	Agusta	A119, A109A, A109C	Repair of inner tang faces.
Coupling Adapter	109-0101-03-1	Agusta	A119, A109E	NDT and touchup surface treatments (tank only cad plate) and paint.
Main Rotor Grip Assembly	109-0101-05-13, 109-0101-05-9	Agusta	A109A	Replacement of grip bushings.
Oil Reservoir Body	109-0102-03-1, 109-0102-03-5	Agusta	A109A	Compliance with B.T. 109-74 (rework body)
Trunnion Assembly	109-0104-01-5	Agusta	A109A	Return to Service (includes NDT, shot peen, cad plate & prime/paint)
Stationary Swashplate Ring	109-0110-63-5	Agusta	A119, A109A, A109E, A109C, AW119MKII	Finish machine arm bushings.
Upper/Lower Rod End	109-0110-73-105, 109-0110-73-113, 109-0110-73-109, 709-0101-18-105, 709-0101-18-111	Agusta	A119, A109A, A109E	Perform MPI and restore cad plate
Upper/Lower Rod End	109-0110-73-105, 109-0110-73-113, 109-0110-73-109, 709-0101-18-111	Agusta	A119, A109A, A109E	Overhaul / Return to Service
Upper/Lower Rod End	109-0110-73-113, 109-0110-73-109	Agusta	A109A, A109E	Remove and replace bearing (P/N: 109-0110-73-109 and/or -113)
Rotor Blade Yoke Assembly	109-0111-03-113	Agusta	A119, A109E, AW119MKII, AW109S	Machine spotfaces (up to 16 locations); install and machine yoke bushings (16 locations)
Rotor Blade Yoke Assembly	109-0111-03-113	Agusta	A119, A109E, AW119MKII, AW109S	Machine spotfaces ONLY (up to 16 locations) S/N L134 ONLY
Damper bracket	109-0111-07-113, 109-0111-07-109, 109-0111-07-117	Agusta	A119, A109E	Overhaul / Return to Service
Damper bracket	109-0111-07-113, 109-0111-07-117	Agusta	A109E	Replace Spherical Bearing (-113/-117 ONLY)
Damper bracket	109-0111-07-113, 109-0111-07-117	Agusta	A109E	Replace Bushings (2 locations possible)
Lever Assembly	109-0111-08-105	Agusta	A109E	Install and finish machine damper bushings.
Lever Assembly	109-0111-08-105	Agusta	A109E	Overhaul / Return to Service
Lever Assembly	109-0112-04-101	Agusta	A119	Repair of corrosion on external faces (Ref PSEAW109/2008/TIMS00002730)
Lever Assembly	109-0112-04-101	Agusta	A119	Repair of corrosion on external faces
Lever Assembly	109-0112-04-101	Agusta	A119	Damage in blade bolt holes & external mating surfaces.
Lever Assembly	109-0112-04-101	Agusta	A119	Repair of oversize pitch link bushing bores.
Rod End Assy	109-0112-11-105	Agusta	A119	Replace worn spherical bearing.
Pitch Control Link Assembly	109-0130-05-9, 109-0130-05-117	Agusta	A119, A109A, A109E,	Overhaul / Return to Service
Pitch Control Link Assembly	109-0130-05-9, 109-0130-05-113	Agusta	A109A, A109C	Remove and replace large spherical bearing
Pitch Control Link Assembly	109-0130-05-9, 109-0130-05-113	Agusta	A109A, A109C	Remove and replace small spherical bearing

Pitch Control Link Assembly	109-0130-05-117	Agusta	A119, A109A, A109E, A109C	Remove and replace small spherical bearing (Link: 109-0130-05-117)
Pitch Control Link Assembly	109-0130-05-117	Agusta	A119, A109A, A109E, A109C	Remove and replace large spherical bearing (Link: 109-0130-05-117)
Pitch Control Lever	109-0130-43-113	Agusta	A109E	Modification of lever from -113 to -115 (machine chamfer)
Pitch Control Lever	109-0130-43-113, 109-0130-43-7, 109-0130-43-115	Agusta	A109E	Paint strip and perform NDT.
Pitch Control Lever	109-0130-43-113, 109-0130-43-7, 109-0130-43-115	Agusta	A109E	Overhaul / Return to Service
Pitch Control Lever	109-0130-43-115	Agusta	A109E	Remove and replace worn bearings
Pitch Control Lever	109-0130-43-113, 109-0130-43-7, 109-0130-43-115	Agusta	A109E	Replace worn/damaged bushings.
Link Assembly	109-0130-60-109	Agusta	A109A	Overhaul / Return to Service
Sleeve Assembly	109-0130-94-101	Agusta	A109E	Modification from -101 to -109 (machine chamfer)
Connecting Link, Rigid (T/R)	109-0133-04-109	Agusta	A119, A109A, A109E, A109C	Overhaul/Return to Service (includes bearing replacement, NDT, and paint)
Swashplate Rotating Assy	109-0134-03-105	Agusta	A119, A109E	Replace swashplate arm bushings (4 locations possible)
Upper Rod End	109-0134-06-109, 109-0134-06-105, 109-0134-06-113, 109-0134-06-111	Agusta	A119, A109E	Perform MPI and restore cad plate.
Rotating Half Scissors Assembly	109-0134-10-105	Agusta	A119, A109E, AW119MKII	Finish machine scissors bushings (includes paint strip and NDT)
Rotating Half Scissors	109-0134-10-105	Agusta	A119, A109E, AW119MKII	Remove and replace worn bushings.
Rotating Half Scissors	109-0134-10-105	Agusta	A119, A109E, AW119MKII	Overhaul / Return to Service
Scissor Assy Half	109-0135-05-101	Agusta	A119, AW119MKII	Overhaul/Return to Service
Hub Assy, Tail Rotor	109-0162-03-101, 109-0162-03-103, 109-0162-03-105	Agusta	AW119MKII	Tail Rotor Hub & Blade Assy 400 flight hours inspection.
Main Gearbox Upper Case	109-0402-24-9	Agusta	A119, A109A, A109E, A109C, AW119MKII	Repair servo-actuator fitting seats.
Main Gearbox Upper Case	109-0402-24-9	Agusta	A119, A109A, A109E, A109C, AW119MKII	Repair lower mounting flange.
Main Gearbox Upper Case	109-0402-45-101	Agusta	A119, A109E, AW119MKII	Repair actuator fitting seats.
Main Gearbox Upper Case	109-0402-45-101	Agusta	A119, A109E, AW119MKII	Repair servo-actuator fitting seats.
Main Transmission Housing Assembly	109-0402-25-123, 109-0402-25-117, 109-0402-25-121, 109-0402-25-127, 109-0402-25-131	Agusta	A119, A109A, A109E, A109C	Repair of mating surface (Section O) (IAW Overhaul Manual)

Main Transmission Housing Assembly	109-0402-25-123, 109-0402-25-117, 109-0402-25-121, 109-0402-25-127, 109-0402-25-131	Agusta	A119, A109A, A109E, A109C	Repair input pinion liner bore and install standard liner or oversized liner.
Main Transmission Housing Assembly	109-0402-25-123, 109-0402-25-117, 109-0402-25-121, 109-0402-25-127, 109-0402-25-131	Agusta	A119, A109A, A109E, A109C	Replace Lower Liner (Liner E)
Gleason Gear	109-0403-07-103	Agusta	A109K2, A109A, A109E	Perform MPI inspection.
Crown Planetary	109-0403-11-107, 109-0403-11-3	Agusta	A119, A109E	Perform MPI inspection.
Pinion Assembly	109-0403-34-101, 109-0403-34-105	Agusta	A119, A109C	NDT and Cadmium plate
Gleason Crown Shaft	109-0405-04-1	Agusta	A109E	Machining Surface D (includes NDT)
Main Mast	109-0405-76-1	Agusta	A109K2, A109A, A109E	Cadmium plate main mast
Main Mast	109-0405-76-1, 109-0405-76-107, 109-0405-76-103	Agusta	A109K2, A119, A109A, A109E, AW119MKII	Perform MPI and cad plate.
Mounting Sleeve	109-0435-31-1	Agusta	A109A, A109E	Repair of damaged mating flanges.
Case Assembly	109-0442-01-17	Agusta	A109E	Repair of corrosion on bushing lugs (including bushing replacement).
Agusta Special Processes	109-0442-03-1, 109-0435-16-1, 109-0111-33-101, 109-0130-43-115, 109-0130-43-7, 109-0134-10-105, 109-0402-35-105, 109-0402-39-103, 109-0402-40-101, 109-0402-25-109, 109-0402-24-9, 109-0402-30-1, 109-0402-29-1, 109-0402-12-1, 109-0402-22-7, 109-0402-23-107, 109-0435-31-1, 109-0442-01-17, 109-0402-35-101, 109-0407-66-101, 109-0406-82-1, 109-	Agusta	A109K2, A119, A109A, A109E, A109C	Paint strip and perform FPI.

Agusta Special Processes	109-0445-05-1, 109-0443-01-1, 109-0433-01-103, 109-0433-01-107, 109-0445-08-7, 109-0111-36-101, 109-0111-28-101, 109-0111-34-101, 109-0405-10-3, 109-0405-02-1, 109-0405-01-3, 109-0403-10-1, 109-0403-09-105, 109-0405-32-1, 109-0403-11-107, 109-0405-05-1, 109-0403-35-101, 109-0403-34-105, 109-0403-33-105, 109-0403-32-101, 109-0407-49-101, 109-0403-31-101, 109-0405-29-1, 109-0404-14-15, 109-0407-13-101, 109-0403-08-1, 109-0406-12-1, 109-0406-07-1, 109-0403-18-1, 109-0403-19-1, 109-0403-14-1, 109-0403-14-3, 109-0445-08-113, 109-0101-02-1, 109-8101-47-105, 109-0134-08-103, 109-0110-67-111, 109-0403-07-103, 109-0403-25-101, 109-0403-24-101, 109-0403-23-101, 109-0403-05-111, 109-0403-06-105, 109-0403-04-3, 109-	Agusta	A109K2, A119, A109A, A109E, A109C	Perform clean/strip and MPI. Cad plate and/or solid film lube if required.
Agusta Special Processes		Agusta		Paint strip and perform FPI. (AW139 components)
Agusta Special Processes	109-0433-01-107, 109-0445-08-7, 109-0403-33-105, 109-0445-08-113, 109-0101-02-1, 109-0134-08-103, 109-0403-05-111, 109-0407-02-101, 109-0443-02-101, 109-0134-06-111, 109-0110-73-111, 109-0433-01-1, 109-	Agusta	A109K2, A119, A109A, A109E, A109C	NDT, Tank Cad and paint.
Agusta Special Processes	109-0402-40-101, 109-0402-39-101	Agusta	A119	Repair of Corrosion Protection for Magnesium Parts (Includes FPI)
Agusta Special Processes		Agusta		Paint strip, perform MPI, and cad plate if req'd. (AW139 components)
Tail Rotor 90° Gearbox	109-0442-04-101	Agusta	A119	Modification of gearbox -101 to -105.
Tail Rotor 90° Gearbox	109-0442-04-101	Agusta	A119	Repair of drain plug hole
Tail Rotor 90° Gearbox	109-0442-04-101, 109-0442-04-105	Agusta	A119	Replacement of lug bushing(s) with face/bore repair if req'd. (SEE NOTES)
T/R Output Shaft	109-0443-03-107	Agusta	A119, A109A, A109E,	NDT and apply surface treatments
Output Drive Shaft	109-0445-08-117	Agusta	A109K2, A109A, A109E, A109C	NDT and touchup surface treatments (tank only cad plate) and paint.

Shaft Assembly	109-0619-38-105	Agusta	A109A	Overhaul / Return to Service
Middle Lever Assembly	109-4160-19-101	Agusta	A119	Line ream bushing bores and finish machine bushing faces. (4 locations)
Middle Lever Assembly	109-4160-19-101	Agusta	A119	Remove and replace worn/damaged bushings (3 pairs possible)
Rotating Half Scissors	109-8110-16-1	Agusta	A109A	Overhaul / Return to Service
Rotating Half Scissors	109-8110-16-1	Agusta	A109A	Remove and Replace bushings
Trunnion Assy	109-8131-35-103	Agusta	A119	Repair journals (Surface G)
Main Rotor Hub Assembly	3G6220A00332	Agusta	AW139	Replacement of worn/damaged bushings.
Tension Link	3G6220A00531	Agusta	AW139	Replace worn/damaged blade bolt (large) bushings (2 sets possible).
Tension Link	3G6220A00531	Agusta	AW139	Replace worn/damaged droop stop bushings (4 possible)
Tension Link	3G6220A00531	Agusta	AW139	Overhaul/Return to Service. Includes all repairs noted below and replacement parts. Also includes, engineering evaluation and approval of minor damage, as applicable.
Scissors Attachment Flange Assy	3G6220A00632	Agusta	AW139	Remove and replace worn or damaged bushings.
Flange Assy, Scissors Attachment	3G6220A00633	Agusta	AW139	Remove and replace worn or damaged bushings.
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Replacement of worn/damaged lag-damper attachment bushings.
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Remove and replace worn blade bolt
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Remove and replace pitch link attachment bushings.
Pitch Control Lever Assy.		Agusta		Remove corrosion on face
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Remove and replace worn inner bushings (2 locations possible)
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Blend repair of thru bore.
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Overhaul/Return to Service, including engineering review and subsequent approvals, as necessary.
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Replace spacer (2 possible) SEE NOTES
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Repair of mechanical damage on the damper attachment lugs.
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Repair of mechanical damage to lug corner
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Repair corrosion in the blade bolt chamfers
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Replace damaged threaded insert

Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Repair corrosion around tension link attachment holes (exterior surfaces only).
Droop Stop Bracket	3G6220A03031	Agusta	AW139	Overhaul / Return to Service
Rotating Swashplate	3G6230A00332, 3G6206P01331	Agusta	AW139	Replace worn/damaged bushings. (5 locations/sets possible)
Rotating Swashplate	3G6230A00332	Agusta	AW139	Prime/Paint
Top Rotating Scissors	3G6230A00832, 3G6230A00833	Agusta	AW139	Overhaul/Return to Service
Top Rotating Scissor	3G6230A00834	Agusta	AW139	Overhaul/Return to service (includes bushing replacement)
Bottom Rotating Scissors	3G6230A00932	Agusta	AW139	Remove and replace worn or damaged
Bottom Rotating Scissors	3G6230A00932	Agusta	AW139	Remove and replace spherical bearing.
Bottom Rotating Scissors	3G6230A00932	Agusta	AW139	Overhaul/Return to Service
Upper Rod End Assembly	3G6230A01132	Agusta	AW139	Upgrade rod end from PN: 3G6230A01132 to PN: 3G6230A01133
Upper Rod End Assembly	3G6230A01133	Agusta	AW139	Replace worn / damaged rod end bearings (Applicable to 1133 rod end)
Upper Rod End Assembly	3G6230A01132, 3G6230A01133	Agusta	AW139	Overhaul / Return to Service
Lower Rod End	3G6230A03632	Agusta	AW139	Upgrade rod end from PN: 3G6230A03632 to PN: 3G6230A03633
Lower Rod End	3G6230A03633	Agusta	AW139	Replace worn / damaged rod end bearings (Applicable to 633 rod end)
Lower Rod End	3G6230A03632, 3G6230A03633	Agusta	AW139	Overhaul / Return to Service
Lower Rod End	3G6230A03632, 3G6230A03633	Agusta	AW139	Replace worn/damaged tube with high level detail.
Tail Rotor Drive Adapter	3G6320A09652	Agusta	AW139	Overhaul / Return to Service. (under development)
Tail Rotor Drive Adapter	3G6320A09652	Agusta	AW139	Repair of wear on the sliding journal (ref. Ø 1.6124 inch).
Tail Rotor Drive Adapter	3G6320A09652	Agusta	AW139	Repair of wear on the sliding journal (ref. Ø 1.9861 inch).
Upper Bracket	3G6330A00232	Agusta	AW139	Overhaul / Return to Service
Upper Bracket	3G6330A00232	Agusta	AW139	Repair worn/ damaged spherical bearing.
Anti-Torque Beam Assy	3G6330A00532	Agusta	AW139	Replace worn/damaged bushings (4 possible)
Left Forward Fitting	3G6330L00131, 3G6330L00132	Agusta	AW139	Repair worn/ damaged spherical bearing.
Aft Fitting	3G6330L00231, 3G6330L00232	Agusta	AW139	Repair worn/damaged spherical bearing.
Main gearbox mount rod (Fwd/Aft)	3G6330V00231, 3G6330V00131	Agusta	AW139	Remove and replace damaged/worn bushings.
Lag Damper Assembly	3G6420V00455	Agusta	AW139	Overhaul / Return to Service
Grip Assy		Agusta		Replace worn/damaged bushings.
Grip Assy	709-0101-10-101	Agusta	A109K2, A109C	Replace worn/damaged trunnion.

Tail Rotor Blade Bolt	709-0160-47-101	Agusta	A119, A109E, AW119MKII	Restore cad plating.
Rod End Assy	M006-01H004-041, M006-01H004-045	Agusta	AW139	Remove & replace rod end assembly spherical bearing.
Rod End Assy	Y42286-31-1	Agusta	AW139	Replace worn/damaged rod end spherical bearing.

Part Description 部件名称	Part Number 件号	OEM 原始设备制造商	Model 机型	Description 工作内容
Upper/Lower Rod End	109-0110-73-**	Agusta	A119, A109A, A109E	Overhaul / Return to Service
Damper bracket	109-0111-07-**	Agusta	A119, A109E	Overhaul / Return to Service
Lever Assembly	109-0111-08-105	Agusta	A109E	Overhaul / Return to Service
Pitch Control Link Assembly	109-0130-05-*	Agusta	A119, A109A, A109E, A109C	Overhaul / Return to Service
Pitch Control Lever	109-0130-43-**	Agusta	A109E	Overhaul / Return to Service
Link Assembly	109-0130-60-109	Agusta	A109A	Overhaul / Return to Service
Connecting Link, Rigid (T/R)	109-0133-04-109	Agusta	A119, A109A, A109E, A109C	Overhaul/Return to Service (includes bearing replacement, NDT, and paint)
Rotating Half Scissors	109-0134-10-105	Agusta	A119, A109E, AW119MKII	Overhaul / Return to Service
Scissor Assy Half	109-0135-05-101	Agusta	A119, AW119MKII	Overhaul / Return to Service
Shaft Assembly	109-0619-38-105	Agusta	A109A	Overhaul / Return to Service
Rotating Half Scissors	109-8110-16-1	Agusta	A109A	Overhaul / Return to Service
Nose Landing Gear	1944E1000-	Sikorsky	S-76	Overhaul i.a.w. Godrich CMM.
Main Landing Gear	1945E1000C01	Sikorsky	S-76B, S-76A, S-76C, S-76C+, S-76	Overhaul i.a.w. Goodrich CMM.
Lower drag brace	1945E74-10, 2071-74-10	Sikorsky	S-76B, S-76A, S-76C, S-76C+	Overhaul / Return to Service
Tube Assy	206-001-022-085, 206-001-022-087	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Tube Assembly	206-001-058-101	Bell	206L	Overhaul / Return to Service
Tube Assy	206-001-191-001	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Bell Crank Assembly	206-001-526-001	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Bell crank assembly	206-001-547-**	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Idler Assembly	206-001-550-017, 206-001-550-009	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Bellcrank Assy	206-001-552-001	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Support Assembly	206-001-555-001, 206-001-555-101	Bell	206L	Overhaul / Return to Service
Bellcrank Assy	206-001-763-001	Bell	206L	Overhaul / Return to Service
Main Rotor Mast	206-010-332-**	Bell	206A, 206B, 206B3, OH-58A, OH-58C	Overhaul / Return to Service
Idler Link	206-010-336-**	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Swashplate Outer Cap	206-010-444-001, 206-010-444-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Lever Assy, Collective	206-010-447-109	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service
Swashplate Assembly	206-010-450-**	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Repair I.A.W. Bell CR&O
Swashplate Assembly	206-010-450-**	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Repair per Bell CR&O (206L)

Swashplate Assembly	206-010-450-007	Bell	206A, 206B, 206L	Overhaul / Return to Service (Military TM)
Main Rotor Controls Support Assembly	206-010-452-**	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, OH-58A, OH-58C, 505	Overhaul / Return to Service
Sleeve Assembly	206-010-454-005, 206-010-454-109, 206-010-454-113, 206-010-454-	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service
Drive Assy, Swashplate. (206L)	206-010-800-103, 206-010-800-101	Bell	206L	Overhaul / Return to Service
Main Rotor Pitch Horn	206-011-104-005, 206-011-104-009, 206-010-185-001	Bell	206A, 206B, 206L1, 206L3, 206L4, 206L	Overhaul IAW CR&O.
Trunnion Bearing	206-011-111-001, 2AA-011-111-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul Inspection
Main Rotor Trunnion`	206-011-113-103, 206-011-120-103, 206-011-113-105, 206-011-120-105	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service
Flap Restraint Assy	206-011-117-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Roller Bearing	206-011-118-001, 2AA-011-118-001	Bell	206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Pin Assembly	206-011-125-105, 2AA-011-125-105, 206-011-125-001, 2AA-011-125-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service
Main Rotor Grip	206-011-132-113A, 206-011-132-113	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service (Army Fleet Support)
Main Rotor Yoke	206-011-149-101, 206-011-149-105	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Strap bolt	206-011-260-103, 206-011-260-101, 2AA-011-260-101, 2AA-011-260-103	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service
Idler Assy	206-011-723-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Pitch Change Tube	206-011-724-001, 206-011-724-005, 206-011-724-109, 206-011-724-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Trunnion Assy	206-011-728-001	Bell	206L	Overhaul / Return to Service
T/R Hub & Blade Assy. (206L-4)	206-011-749-105, 206-011-749-109, 206-011-749-113, 206-011-749-	Bell	206L4	Overhaul High Altitude T/R hub & blades. (206L4)
Tail Rotor Hub Assembly	206-011-801-003, 206-011-801-007	Bell	206A, 206B	Overhaul i.a.w. Bell 206 CR&O.
T/R Pitch Horn	206-011-809-001, 206-011-809-005, 206-011-809-107, 206-011-809-109	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Tail Rotor Hub Assembly	206-011-810-125, 206-011-810-139, 206-011-810-153, 206-011-810-009, 206-011-810-015, 206-011-810-119, 206-011-810-003	Bell	206A, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul I.A.W. Bell CR&O. (206A/B/L)

T/R Hub and Blade Assy	206-011-810-151, 206-011-810-157, 206-011-810-157GC, 206-011-810-157G, 206-011-810-151G	Bell	206L3, 206L4, 206L	Overhaul T/R Hub & Blades.
T/R Hub and Blade Assy	206-011-810-151EC, 206-011-810-157EC, 206-011-810-151E, 206-011-810-157E, 206-011-810-145E	Bell	206B3, 206L1, 206L3, 206L4, 206L	Overhaul T/R Hub & Blades.
Tail Rotor Trunnion	206-011-812-003, 206-011-812-001, 206-011-812-005	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Tail Rotor Bearing Hsg	206-011-814-001, 206-011-814-003, 206-011-814-009, 206-011-814-011, 206-011-814-113	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
T/R Blade (OEM)	206-016-201-131, 206-016-201-135, 206-016-201-001, 206-016-201-107, 206-016-201-113, 206-016-201-127, 206-016-201-001M, 206-016-201-107M, 206-016-201-113M, 206-016-	Bell	206L, 206L4, 206A, 206B, 206B3, 206L1, 206L3, 505	Overhaul Tail Rotor Blade IAW Bell CR&O.
Pylon Support Spindle	206-031-554-003	Bell	206A, 206B, 206B3, OH-58A, OH-58C	Overhaul / Return to Service
Pylon Support Spindle	206-031-554-003	Bell	206A, 206B, 206B3, OH-58A, OH-58C	Overhaul and Return to Service (DMWR)
Pylon Support Link	206-031-589-001	Bell	206A, 206B, 206B3	Overhaul / Return to Service.
Pylon Support Mount	206-031-593-001, 206-031-593-002, 206-031-592-001, 206-031-592-002	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Pin Assembly	206-031-633-101	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Nodal Beam Support	206-033-501-003, 206-033-501-004, 206-033-501-001, 206-033-501-101	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Transmission Restraint	206-033-506-103, 206-033-506-107, 206-033-506-109	Bell	206L1, 206L3, 206L4, 206L	Overhaul/Return to Service
Transmission Restraint	206-033-506-005, 206-033-506-101	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Flexure Assembly	206-033-516-101, 206-033-516-001	Bell	206L1, 206L3, 206L4, 206L	Overhaul/Return to Service
Stop Mount	206-033-542-001, 206-033-542-003	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Isolation Support	206-033-544-001	Bell	206L1, 206L3, 206L4, 206L	Overhaul/Return to Service
Link Assembly	206-033-554-101	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Mast Assembly	206-040-002-007, 206-040-002-109, 206-040-002-111, 206-040-002-111S	Bell	206A, 206B, 206B3	Overhaul / Repair / 1500 Hr Insp I.A.W. Bell CR&O.
Transmission Assembly, 206B	206-040-002-005, 206-040-002-015, 206-040-002-013, 206-040-002-025, 206-040-002-029, 206-040-002-027, 206-040-002-115, 206-040-002-115FM, 206-040-002-117, 206-040-	Bell	206A, 206B, 206B3	Overhaul IAW BHT CR&O

Transmission Assembly, 206L series	206-040-004-003, 206-040-004-005, 206-040-004-101, 206-040-004-111, 206-040-004-107, 206-040-004-115, 206-706-045-107, 206-040-004-	Bell	206L1, 206L3, 206L4, 206L	Overhaul I.A.W. BHT-CR&O
Driveshaft Assy	206-040-015-015, 206-040-015-103, 206-040-015-107, 206-040-100-013, 206-040-100-101, 206-040-015-	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, 206A	Overhaul / Return to Service
Input Pinion Gear	206-040-020-003, 206-040-020-009, 206-040-020-103, 206-040-020-105, 206-040-020-109, 406-040-020-109, 406-040-020-105	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Spiral Bevel Gear	206-040-021-001, 206-040-021-005, 206-040-021-101, 406-040-021-101	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Input Pinion Nut	206-040-047-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Input Pinion Housing	206-040-052-003, 206-040-052-005, 206-040-052-009, 206-040-052-105, 206-040-052-009R	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Mast Bearing Liner	206-040-061-001	Bell	206A, 206B, 206B3	Overhaul work instructions
Mast Plate	206-040-062-003, 2AA-040-062-003, 2AA-040-062-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul/Return to Service
Mast Bearing Nut	206-040-078-003, 206-040-078-005, 206-040-078-101, 206-040-078-103	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul/ Return to Service
Coupling	206-040-118-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Transmission Assembly Gear	206-040-122-103, 206-040-122-007, 206-040-122-101	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Ring Gear	206-040-124-001, 206-040-124-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Oil Filter Head	206-040-126-001	Bell	206B, 206B3	Overhaul / Return to Service
Planetary Gear Carrier	206-040-140-013	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L, OH-58A, OH-58C	Overhaul / Return to Service (DMWR)
Planetary Gear	206-040-146-001, 206-040-146-103, 206-040-146-101	Bell	206B3, 206L	Overhaul / Return to Service I.A.W. BHT CR&O.
Transmission Top Case	206-040-151-013	Bell	206A, 206B, 206B3, OH-58A, OH-58C	Overhaul/Return to Service (DMWR)
Oil Pump Assembly	206-040-184-001, 206-040-184-	Bell	206A, 206B, 206B3	Overhaul IAW Bell CR&O.
Oil Pump Assembly	206-040-184-101	Bell	206B, 206B3	Overhaul IAW CR&O. (-101, 206B High
Oil Pump	206-040-190-005, 206-040-190-	Bell	206L1, 206L3, 206L	Overhaul / Return to Service.

Tail Rotor Drive Adapter	206-040-203-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Tail Rotor Drive Adapter	206-040-203-003, ABLE-0104-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service.
Tail Rotor Drive Adapter	206-040-203-003	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service (TM)
Ring	206-040-223-003, 206-040-223-101	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Freewheeling Sump Hsg	206-040-236-009, 206-040-236-013, 206-040-236-017, 206-040-236-005	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Freewheeling Sump Hsg	206-040-236-009, 206-040-236-005	Bell	206A, 206B, 206B3	Overhaul / Return to Service (TM)
Freewheeling Fwd Cap	206-040-237-001	Bell	206A, 206B	Overhaul / Return to Service
Freewheeling Aft Cap	206-040-241-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Freewheeling Aft Cap	206-040-241-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service (TM)
Freewheeling Fwd Cap	206-040-267-001, 206-040-268-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Support Assy. (206)	206-040-270-101, 206-040-230-017	Bell	206A, 206B, 206B3, 206L	Overhaul / Return to Service
Oil Cooler Impeller Shaft	206-040-320-011, 206-040-320-015, 206-040-320-103, 2AA-040-320-103	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Splined Adapter	206-040-328-101, 206-040-328-003	Bell	206B, 206L1, 206L3, 206L4,	Overhaul / Return to Service
T/R Driveshaft Hanger Assembly	206-040-344-009, 206-040-344-005	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Tail Rotor Driveshaft	206-040-365-121, 206-040-365-123, 206-040-365-101, 206-040-365-001, 206-040-365-125, 206-040-365-105	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L	Overhaul / Return to Service
Tail Rotor Driveshaft	206-040-369-101, 206-040-369-001	Bell	206A	Overhaul / Return to Service
Fan Assy (oil cooler)	206-040-370-103, 206-040-370-113	Bell	206L4, 206L	Overhaul / Return to Service
TR drive shaft assmebly	206-040-383-101	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Shaft Assy	206-040-370-011	Bell	206L	Overhaul / Return to Service
Tail Rotor Gearbox Assembly	206-040-400-013, 206-040-400-107, 206-040-400-011, 206-040-400-105, 206-040-400-009, 206-040-400-103, 206-040-400-109, 206-040-400-	Bell	206A, 206B, 206B3	Overhaul / Repair I.A.W. Bell CR&O.

Tail Rotor Gearbox Assembly	206-040-402-003, 206-040-402-101, 206-040-402-105, 206-040-402-107, 206-040-402-111, 206-040-402-105FM1, 206-040-402-113, 206-040-402-107FM, 206-040-402-111FM, 206-040-402-113FM, 206-040-402-	Bell	206B3, 206L1, 206L3, 206L4, 206L	Overhaul IAW Bell CR&O. (206B and 206L)
Tail Rotor Gearbox Cap	206-040-437-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Output Shaft	206-040-439-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Oil Filter Housing	206-040-525-001, 206-040-525-007, 206-040-525-101, 206-040-525-109	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Lwr Mast Bearing Support	206-040-533-001	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Planetary Ring Gear	206-040-534-105	Bell	206L3, 206L4	Overhaul / Return to Service (Bell manual)
Main Rotor Mast	206-040-535-101, 206-040-535-105, 206-040-535-109	Bell	206L1, 206L3, 206L4, 206L, 505	Overhaul / Return to Service
Main Rotor Mast Liner	206-040-537-001	Bell	206L1, 206L3, 206L	Overhaul / Return to Service
Transmission Top Case	206-040-550-101	Bell	206L3, 206L4	Overhaul and Return to Service Inspection
Sun Gear	206-040-561-103	Bell	206L3, 206L4	Overhaul / Return to Service
Sun Gear	206-040-562-101, 206-040-662-101, 206-040-562-103	Bell	206A, 206B, 206L1, 206L3, 206L	Overhaul / Return to Service
Spacer Ring	206-040-570-101	Bell	206L1, 206L3	Overhaul / Return to Service
Mast Bearing	206-040-576-105, 206-040-576-103	Bell	206L1, 206L3, 206L4, 206L	Overhaul Inspection
Main Rotor Mast Liner	206-040-577-101	Bell	206L3, 206L4	Overhaul IAW Bell CR&O.
Freewheeling Fwd Cap	206-040-943-101	Bell	206L1, 206L3, 206L4, 407, 206L	Overhaul / Return to Service
Oil Cooler Blower Housing Assembly	206-061-432-009, 206-061-432-017, 206-061-432-029, 206-061-432-021	Bell	206A, 206B, 206B3	Overhaul I.A.W. Bell CR&O.
Fwd Engine Leg Assy	206-062-101-001, 206-062-101-013, 206-062-101-101, 206-062-101-002, 206-062-101-014, 206-062-101-102	Bell	206B	Overhaul / Return to Service
Lower Engine Mount Leg	206-062-102-001, 206-062-102-013	Bell	206B3	Overhaul / Return to Service
Starter-Generator	200SGL132Q, 206-062-200-123, 200SGL115Q, 200SGL111Q, 206-062-200-141	Bell	206L4, 230, 407, 429, 200SGL-Series	Overhaul IAW TM105A OHM. (206L, 407)
Engine Mount Leg Assembly	206-064-106-001, 206-064-106-101	Bell	206L	Overhaul / Return to Service Instructions
Leg Assy, AFT	206-064-107-111, 206-064-107-101, 206-064-107-109, 206-064-107-103	Bell	206L3, 206L	Overhaul / Return to Service
Servo Actuator	206-076-031-023	Bell	206B, 206B3, TH-67	Overhaul / Return to Service (-023)
Servo Actuator	206-076-031-109	Bell	206B3, TH-67	Overhaul / Return to Service (-109)

HRT Servo Actuator	206-076-031-021	Bell	206B, 206B3, TH-67	Overhaul / Return to Service (-021)
HRT Servo Actuator	206-076-031-107	Bell	206B3, TH-67	Overhaul / Return to Service (-107)
HRT Servo Actuator	206-076-031-013	Bell	206A, 206B	Overhaul / Return to Service (-013)
Rotor Brake Master Cylinder	206-076-047-001, 206-076-047-003, 206-076-047-101	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 407, 206L	Overhaul / Repair / Return to Service Instructions.
Servo Actuator (Tactair)	206-076-062-003	Bell	206L1, 206L3, 206L	Overhaul / Return to Service (-003)
Servo Actuator (Tactair)	206-076-062-101	Bell	206L1, 206L3, 206L4, 206L	Overhaul / Return to Service (-101)
Servo Actuator (HRT)	206-076-062-103, 206-076-062-103V, 206-076-062-123	Bell	206L1, 206L3, 206L4, 407, 206L	Overhaul / Return to Service (-103, -103V, -123)
Servo Actuator (HRT)	206-076-062-105, 206-076-062-105V, 206-076-062-111, 206-076-062-125, 206-076-062-131	Bell	407	Overhaul / Return to Service (-105/-105V/-111/-125/-131)
Servo Actuator (HRT)	206-076-062-107, 206-076-062-107V, 206-076-062-127	Bell	407	Overhaul / Return to Service (-107/-107V/-127)
Servo Actuator (Tactair)	206-076-062-003	Bell	206L1, 206L3, 206L	Overhaul / Return to Service (-003 up to S/N 1836A)
Rotor Brake Caliper	206-340-301-103	Bell	206L4, 407	Overhaul / Repair I.A.W. Bell CR&O
Brake Disc	206-340-301-101	Bell	206L4	Overhaul / Return to Service
Tail Rotor Blade (Van Horn)	2062200-101, 2062200-301	Bell	206L4	Overhaul of Tail Rotor Blade
Nose Landing Gear Piston	2070-4, 1944E4	Sikorsky	S-76B, S-76A, S-76C, S-76C+	Overhaul / Return to Service
Main Landing Gear Piston	2071-4, 1945E4	Sikorsky	S-76B, S-76C, S-76C+	Overhaul / Return to Service.
Idler Assembly	209-011-711-001	Bell	212	Overhaul / Return to Service
Lever Assembly	209-011-712-001, 209-011-712-101	Bell	212, 412	Overhaul / Return to Service
AH-1W Main Transmission	209-040-004-119			Overhaul IAW Navair Depot Maintenance
AH-1W Mast Assy	209-040-010-101, 209-040-010-103			Overhaul IAW Navair Depot Maintenance
Rotor Brake Flange	209-040-177-101, 412-040-177-101	Bell	212, 214ST, 412	Overhaul / Return to Service
Oil Cooler Blower Assembly	209-062-502-009, 209-062-502-101, 212-062-514-101	Bell	212, 412	Overhaul I.A.W. Bell CR&O. (212 and 412)
Bellcrank Assy	212-001-317-001, 212-001-312-001	Bell	212	Overhaul / Return to Service
Cylinder and Support Assembly	212-001-720-105, 212-001-720-101, 212-001-720-005	Bell	412	Overhaul / Return to Service (212-076-005-111)
T/R Retention Nut	212-010-706-001	Bell	212, 412	Overhaul / Return to Service
Tail Rotor Hub Assembly	212-011-701-003, 212-011-701-125, 212-011-701-125FM1	Bell	212, 412, UH-1	Overhaul IAW Bell CR&O. (212, Military)
Tail Rotor Hub Assembly	212-011-701-125, 212-011-701-125FM	Bell	212, 412, UH-1	Overhaul / Return to Service Instructions. (412, C of C Only) INACTIVE
Tail Rotor Hub Assembly	212-011-701-125, 212-011-701-125FM1, 212-011-701-125FM	Bell	212, 412, UH-1	Overhaul / Return to Service Instructions.

Tail Rotor Bearing Hsg	212-011-716-001, 212-011-729-101	Bell	212, 412	Overhaul / Return to Service
Tail Rotor Gearbox Assy	412-706-029-113	Bell	412	Overhaul / Return to Service Instructions, Max Cont Pwr Kit
Main Driveshaft Assembly	212-040-005-003, 212-040-005-007, 212-040-005-011, 212-040-005-103, 212-040-005-103A	Bell	212, 412	Overhaul i.a.w. Bell CR&O.
Transmission Top Case	212-040-059-101	Bell	412	Overhaul / Return to Service
Hydraulic Drive Gear	212-040-149-001	Bell	212, 412	Overhaul IAW CR&O. (412)
Gear	212-040-451-003, 212-040-451-001	Bell	212, 412	Overhaul / Return to Service
Jackshaft Assembly	212-060-774-001	Bell	212	Overhaul / Return to Service
Tripod Assembly	212-061-107-003	Bell	212	Overhaul and return to service.
Tube Assy, Engine Forward Mount	212-061-117-001	Bell	212, 412	Overhaul / Return to Service
Hydraulic Servo Actuator Assembly	212-076-004-103	Bell	212	Overhaul / Return to Service (P/N 212-076-004-103)
AH-1W Scissors & Sleeve	214-010-401-005			Overhaul IAW Navair Depot Maintenance
Tail Rotor Yoke	214-011-802-111, 214-011-802-105	Bell	214ST, 214B	Overhaul I.A.W Bell CR&O (214ST)
AH-1W Intermediate Gearbox	214-040-009-107			Overhaul IAW Navair Depot Maintenance
AH-1W Tail Rotor Drive Gearbox	214-040-011-125, 214-040-011-127			Overhaul IAW Navair Depot Maintenance Manual
Main Transmission Case	214-040-062-011, 214-040-062-101	Bell	214ST, 214B	Overhaul / Return to Service
Bearing, Roller	214-040-123-101, 214-040-123-1			Overhaul Inspection (Military)
Int Gearbox Sleeve	214-040-311-001, 214-040-311-003	Bell	214ST, 214B	Overhaul / Return to Service
Input Quill Sleeve	214-040-412-001	Bell	214ST, 214B	Overhaul / Return to Service (Navair)
AH-1W Driveshaft Hanger	214-040-600-105, 214-040-600-109			Overhaul IAW Navair Depot Maintenance
Splined Coupling	214-040-604-103	Bell	412	Overhaul / Return to Service
Splined Coupling	214-040-604-105	Bell	412	Overhaul / Return to Service
Tail Rotor Driveshaft Assembly	214-040-622-005, 214-040-622-013, 214-040-622-009, 214-040-622-007	Bell	214ST, 214B	Overhaul / Return to Service
AH-1W Tail Rotor Drive Coupling	214-040-630-003			Overhaul IAW Navair Depot Maintenance Manual
Starter-Generator (Goodrich)	23081-018, 206-062-200-113, 23081-073, 23081-072, 23081-057	Bell	206L1, 206L3, 206L4, 407, 206L, EC135, 23081 Series, EC145	Overhaul IAW Goodrich CMM. (206L, 407)
Guide Vane Assembly	2660-1534-01	Bell	212	Overhaul and Return to Service Inspection
Oil Cooler Fan Case	2660-1565-01	Bell	212, 412	Overhaul IAW Bell CR&O.
Oil Cooler Impeller	2660-1624-01	Bell	212, 412	Overhaul / Return to Service
Oil Cooler Blower Shaft	2660-1635-01, 2660-1635-02	Bell	212, 412	Overhaul and Return to Service.
Seal Assembly	206-040-156-101	Bell	206B, 206B3, 206L1, 206L3, 206L4, 206L, 206A	Overhaul/Return to Service

Seal Assembly	206-040-156-001	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 407, 206L	Overhaul / Return to Service (-001)
Oil Pump Body	32-54004-1098-2, 32-54004-0054-1	Bell	206L1, 206L3, 206L4, 407, 206L	Overhaul / Return to Service
Oil Pump Shaft	35-79501-2005-3, Able-0182-2005-3, 35-79501-2248-3	Bell	206A, 206B, 206B3	Overhaul I.A.W. CR&O. (206B)
Oil Pump Shaft	35-79501-1093-2, 35-79501-1145-2, Able-0182-1145-2, Able-0182-1093-	Bell	206A, 206L1, 206L3, 206L4, 407, 206L	Overhaul IAW CR&O (407/206L)
Gimbal Case	350A08-1635-21	Airbus Helicopters	AS350	Overhaul and Return to Service
Pitch Horn Assy	350A12-1368-04	Airbus Helicopters	AS350, AS355	Overhaul/Return to Service.
Mixing Unit	350A27-0250-0401, 350A27-0250-0201	Airbus Helicopters	AS350, AS355, EC130B4, EC130T2, AS350B2, AS350B3	Overhaul / Return to Service
TGB Actuating Rod	350A27-1910-0401	Airbus Helicopters	AS350	Overhaul / Repair (includes NDT, Paint, & replacing heat shrink sleeves (5ea))
Blade Pin	350A31-1771-21, 350A31-1770-01, 350A31-1771-20	Airbus Helicopters	AS350, AS355, EC130	Overhaul / Return to Service
Support Assy	350A31-2019-02, 350A31-2019-00	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Ring Gear	350A32-1051-21, 350A32-1051-20	Airbus Helicopters	AS350, AS355, EC130, AS355NP	Overhaul / Return to Service
Inlet Flange	350A32-3088-01, 350A32-3088-00, 350A32-3088-20	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Vertical Shaft	350A32-3107-23, 350A32-3107-25	Airbus Helicopters	AS350, EC130B4, EC130T2, AS355NP	Overhaul / Return to Service
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Overhaul / Return to Service

Input Housing	350A32-3126-20, 350A32-3126-21	Airbus Helicopters	AS350	Overhaul / Return to Service
TGB Control Lever	350A33-1058-03, 350A33-1058-02	Airbus Helicopters	AS350, AS355, AS355N	Overhaul / Return to Service
Pitch Change Spider	350A33-2030-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Control Rod	350A33-2121-01	Airbus Helicopters	AS350	Overhaul / Return to Service (price includes all repairs).
Rotating Star	350A33-2129-00, 350A33-2129-21, 350A33-2129-03	Airbus Helicopters	AS350	Overhaul / Return to Service
T/R pitch change rod	350A33-2143-00, 350A33-2143-01	Airbus Helicopters	AS350	Overhaul / Return to Service (price includes all repairs).
Pitch Control Rod	350A33-2145-01, 350A33-2145-00	Airbus Helicopters	AS350	Overhaul / Return to Service (price includes all repairs).
Spherical Bearing Yoke	350A33-2150-01, 350A33-2150-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Tail Rotor Hub Body	350A33-3120-01	Airbus Helicopters	EC130	Overhaul / Return to Service
Pitch Change Spider	350A33-3130-00	Airbus Helicopters	EC130	Overhaul / Return to Service (includes NDT, prime/paint, and ball joint bolt replacement (E1) if required).
Sliding Bushing	350A33-3206-20	Airbus Helicopters	EC130	Overhaul / Return to Service (includes cad plate restoration)
Hydraulic Pump Drive Assy	350A35-0131-01	Airbus Helicopters	AS350	Overhaul / Return to Service
Driving Pulley	350A35-1091-20	Airbus Helicopters	AS350, EC130	Overhaul / Return to Service

Shaft, Coupling	350A35-1100-21, 350A35-1100-20	Airbus Helicopters	AS350	Overhaul / Return to Service. (.20 becomes .21)
Flared Housing Assy	350A35-1102-05, 350A35-1102-01, 350A35-1102-02	Airbus Helicopters	AS350	Overhaul / Return to Service
Flared Housing Assy	350A35-1103-01, 350A35-1103-02, 350A35-1103-03	Airbus Helicopters	AS350BA	Overhaul / Return to Service (Includes E1 & MOD 079533 -02 to -03 if req'd)
Gimbal Ring	350A35-1105-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Swashplate Assembly	350A37-1004-11, 350A37-1004-09	Airbus Helicopters	AS350	Overhaul I.A.W. MRV.
Swashplate Guide	350A37-1181-01, 350A37-1181-00, 350A37-1181-02	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Shock Absorber	350A75-2050-06, 350A75-2050-05	Airbus Helicopters	AS350	Overhaul / Return to Service
Shock Absorber	350A75-2080-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Universal Joint Yoke	355A35-2001-01, 355A35-2001-02	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Upper Scissors Link	365A31-1115-01, 365A31-1115-03, 365A31-1115-04	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul / Return to Service (includes bushing replacement, NDT, and paint)
Lower Scissors Link	365A31-1116-03, 365A31-1116-01, 365A31-1116-04	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul / Return to Service (-01 or -03 become -04).
Bearing	365A32-1677-00, 365A32-1677-01	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS365N3, AS366G1, AS366GA	Overhaul Inspection and Dynamic Testing

Bearing	365A32-1685-01, 365A32-1685-03	Airbus Helicopters	AS365, AS365N, AS365N1, AS365N2, AS365N3, AS366G1, AS366GA	Overhaul Inspection and Dynamic Testing
Main Transmission Case	365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul/Return to Service (365A32-2046-XX)
Gimbal Ring	365A32-2111-01, 365A32-2111-02	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS366G1	Overhaul/Return to Service (includes E1 bushing replacement).
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Overhaul / Return to service
Gimbal Ring	365A32-7114-00, 365A32-7114-01	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul / Return to Service
Tail Rotor Pitch Control Shaft	365A33-6214.20, 365A33-6214.21, 365A33-6214.22, 365A33-6214.23	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul / Return to Service
Cover, Oil Pump	366A32-1131-02	Airbus Helicopters	AS365	Overhaul / Return to Service
Tension Link	3G6220A00531	Agusta	AW139	Overhaul / Return to Service. Includes all repairs noted below and replacement parts. Also includes, engineering evaluation and approval of minor damage, as applicable.
Pitch Control Lever Assy.	3G6220A00732	Agusta	AW139	Overhaul / Return to Service, including engineering review and subsequent approvals, as necessary.
Droop Stop Bracket	3G6220A03031	Agusta	AW139	Overhaul / Return to Service
Top Rotating Scissors	3G6230A00832, 3G6230A00833	Agusta	AW139	Overhaul / Return to Service
Top Rotating Scissor	3G6230A00834	Agusta	AW139	Overhaul/Return to service (includes bushing replacement)
Bottom Rotating Scissors Assy	3G6230A00932	Agusta	AW139	Overhaul/Return to Service
Upper Rod End Assembly	3G6230A01132, 3G6230A01133	Agusta	AW139	Overhaul / Return to Service
Lower Rod End	3G6230A03632, 3G6230A03633	Agusta	AW139	Overhaul / Return to Service
Tail Rotor Drive Adapter	3G6320A09652	Agusta	AW139	Overhaul / Return to Service. (under developement)
Upper Bracket	3G6330A00232	Agusta	AW139	Overhaul / Return to Service
Lag Damper Assembly	3G6420V00455	Agusta	AW139	Overhaul / Return to Service
Input Pinion Housing	400-040-055-105, 400-040-055-109	Bell	206L1, 206L3, 206L4, 407, 206L	Overhaul/Return to Service

Main Rotor Grip	406-010-108-125, 406-010-108-119, 406-010-108-121, 406-010-108-131	Bell	407, 427	Overhaul IAW Bell CR&O.
Upper Plate Assembly	406-010-115-127	Bell	407	Overhaul / Return to Service
Lower plate assembly	406-010-117-125	Bell	407, 427	Overhaul / Return to Service
Fitting Assembly	406-010-232-105, 406-010-232-106	Bell	407	Overhaul / Return to Service
Swashplate Assembly	406-010-401-111, 406-010-401-113, 406-010-401-115, 406-010-401-117, 406-010-401-117FM	Bell	407	Overhaul IAW BHT CR&O
Support Assy, Swashplate	406-010-406-119	Bell	407	Overhaul/Return to Service
Sleeve Assy. (407)	406-010-409-107, 406-010-409-113	Bell	407	Overhaul / Return to Service
Swashplate Inner Ring	406-010-410-121	Bell	407	Overhaul Instructions
Outer Ring Assembly	406-010-411-117	Bell	407, 427	Overhaul / Return to Service
Swashplate Inner Cap	406-010-418-101, 406-010-418-103	Bell	407	Overhaul / Return to Service
Swashplate Outer Cap Assy. (407)	406-010-419-109	Bell	407	Overhaul / Return to Service
Lever Assy, Drive (407)	406-010-425-107	Bell	407	Overhaul / Return to Service
Link Assy	406-010-426-101	Bell	407	Overhaul/Return to Service
Gimbal Ring Assembly	406-010-427-109	Bell	407	Overhaul / Return to Service
Link Assy - Anti-Drive, Main Rotor Controls	406-010-432-101	Bell	407, 427	Overhaul / Return to Service
Tail Rotor Yoke	406-012-102-109	Bell	407, 427	Overhaul / Return to Service
Tail Rotor Pitch Horn	406-012-108-107, 407-012-112-101	Bell	407	Overhaul I.A.W. BHT MM.
TR Control Lever Assembly	406-012-124-101	Bell	407	Overhaul / Return to Service
TR Control Idler Assembly	406-012-127-101	Bell	407	Overhaul / Return to Service
Gear	406-040-025-101	Bell	206L4	Overhaul Inspection
Sun Gear	406-040-028-101	Bell	206L3, 206L4	Overhaul / Return to Service
Transmission Top Case	406-040-052-109, 406-040-052-105, 406-040-052-109FM	Bell	407	Overhaul I.A.W. 407-CR&O
Housing Assembly	406-040-055-105	Bell	407	Overhaul / Return to Service
Gearshaft Support Case	406-040-056-111, 406-040-056-107	Bell	407	Overhaul IAW Bell CR&O. (407)
Gearshaft Support Case	406-040-056-101	Bell	206L3, 206L4	Overhaul / Return to Service (206L)
Oil Filter Manifold Assembly	406-040-058-109, 406-040-058-113	Bell	407, OH-58D	Overhaul/Return to Service
Oil Filter Housing	406-040-060-105, 406-040-060-107	Bell	407, OH-58D	Overhaul I.A.W. Bell CR&O. (407)
Input Adapter	406-040-070-101, 406-040-070-103	Bell	206L4, 505	Overhaul/Return to Service
Main Rotor Mast Nut	406-040-090-103	Bell	407	Overhaul/Return to Service
Mast Liner	406-040-092-101	Bell	407	Overhaul /Return to Service
Gear, Pinion	406-040-095-101	Bell	407	Overhaul Inspection
Forward Shaft	406-040-315-111	Bell	206L1, 206L3, 206L4, 407, 206L	Overhaul / Return to Service
Splined Adapter	406-040-316-101	Bell	407	Overhaul / Return to Service

Tail Rotor Gearbox	406-040-400-115, 406-040-400-117, 406-040-400-119, 406-040-400-121, 406-040-400-117FM, 406-040-400-	Bell	407	Overhaul IAW BHT CR&O
Tail Rotor Gearbox Housing	406-040-406-101, 406-040-406-109, 406-040-406-113, 406-040-406-109FM, 406-040-406-113FM	Bell	407, 427	Overhaul / Return to Service
Tail Rotor Output Shaft	406-040-416-101, 407-040-416-101, 407-040-416-103	Bell	407	Overhaul / Return to Service
Input Duplex Bearing	406-040-430-105	Bell	407	Overhaul Inspection and Dynamic Testing
Input Pinion Roller Bearing	406-040-431-105	Bell	407, 427	Overhaul Inspection
Output Shaft Roller Bearing	406-040-433-105	Bell	407, 427	Overhaul Inspection and Dynamic Testing
Freewheeling Assembly.	406-040-500-113, 406-040-500-143, 406-040-500-143A, 406-040-500-123, 406-040-500-127, 406-040-500-131, 406-040-500-143FM, 406-040-500-147, 406-040-500-147FM, 406-040-500-131FM, 406-040-500-147A	Bell	206L4, 407, 206L4	Overhaul I.A.W. BHT CR&O
Freewheeling Cap (Support) Assy	406-040-500-139, 406-040-500-141, 406-040-500-145, 406-040-500-105, 406-040-500-119	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 407, 206L	Overhaul/Return to Service
Input Shaft	406-040-516-101	Bell	407	Overhaul/Return to Service
Freewheeling Output Shaft	406-040-517-101	Bell	407	Overhaul / Return to Service
Drive Adapter	406-040-542-107, 406-040-542-105	Bell	407	Overhaul / Return to Service
Output FW Clutch Adapter	406-040-550-101, 406-040-550-103	Bell	206L4, 407	Overhaul / Return to Service
Sprag Clutch	406-040-580-103	Bell	206L4, 407	Overhaul sprag clutch IAW CR&O.
Oil Pump	406-340-100-101, 406-340-100-103, 406-340-100-101FM	Bell	206L4, 407	Overhaul / Repair I.A.W Bell CR&O
Eng. and Transmission Oil Cooler	406-360-500-101, 406-360-500-105	Bell	407	Overhaul I.A.W. manufacturers data. (407)
Tube Assembly	407-001-026-101	Bell	407	Overhaul / Return to Service
Spring Link Assy	407-001-331-103	Bell	407	Overhaul/Return to Service
Hub Assembly, Main Rotor	407-010-100-103, 407-010-100-111, 407-010-100-115, 407-010-100-	Bell	407	Overhaul IAW BHT CR&O
Pitch Horn	407-010-103-101, 407-010-103-107, 407-010-103-113, 407-010-103-	Bell	407, 427	Overhaul / Return to Service
Mast Nut	407-010-106-103, 407-010-106-101	Bell	407	Overhaul/Return to Service (Bell 407 Mast
Lower Cone Seat	407-010-107-103, 407-010-107-105	Bell	407	Overhaul / Return to Service
MAST NUT LOCK	407-010-117-101	Bell	407	Overhaul/Return to Service (Bell 407 Mast Nut Lock)

Mast Nut Retainer	407-010-118-101	Bell	407	Overhaul/Return to Service
Frahm Assembly	407-010-150-101A, 407-010-150-101B, 407-010-150-105, 407-010-150-105A, 407-010-150-109, 407-010-150-109A, 407-010-150-111,	Bell	407	Overhaul IAW Bell MM
Tail Rotor Hub Assembly	407-012-101-107, 407-012-101-113, 407-012-101-113FM	Bell	407	Overhaul I.A.W. BHT CR&O
Tail Rotor Hub & Blade Assembly. 407	407-012-101-105, 407-012-101-111, 407-012-101-115	Bell	206B, 407	Overhaul I.A.W. Bell CR&O
Main Transmission, 407	407-040-006-103, 407-040-006-107, 407-040-006-111, 407-040-006-115, 407-040-006-107FM1, 407-040-006-115FM1, 407-040-006-107FMS, 407-040-006-115FM, 407-040-006-123, 407-040-006-127, 407-040-006-	Bell	407	Overhaul IAW BHT CR&O (See Notes)
Mast Assembly	407-040-011-101, 407-040-011-101S, 407-040-011-103, 407-040-011-103S, 407-040-011-105, 407-040-011-105S, 407-040-011-107, 407-040-011-107S, 407-040-011-107FM, 407-040-011-103FM, 407-040-011-105FM, 407-040-011-111,	Bell	407	Overhaul IAW BHT CR&O
Pinion Assembly	407-040-034-101, 407-040-041-101	Bell	407	Overhaul / Return to Service
Mast Assy. Pole	407-040-038-105, 407-040-038-101, 407-040-038-105FM, 407-040-038-101FM, 407-040-038-109FM, 407-040-038-111, 407-040-038-109, 407-040-038-111, 407-040-038-111R, 407-040-038-111T, 407-040-038-111T1, 407-040-038-	Bell	407	Overhaul / Return to Service
Lower Mast Bearing Support	407-040-054-101, 407-040-054-105	Bell	407	Overhaul IAW Bell CR&O.
Gearshaft Support Case	407-040-062-101	Bell	407	Overhaul IAW Bell CR&O. (407)
Shaft and Bearing Hanger Assy, T/R Driveshaft	407-040-302-101, 407-040-302-103, 407-040-302-105, 407-040-302-107, 407-040-302-109, 407-040-302-111, 407-040-302-113, 407-040-302-115, 407-040-302-117, 407-040-302-117S	Bell	407	Overhaul/Return to Service
Oil Cooler Blower	407-040-303-133S, 407-040-303-117, 407-040-303-135, 407-040-303-	Bell	407	Overhaul/Return to Service
Oil Cooler Blower Shaft	407-040-320-101, 407-040-320-103, 406-040-320-101	Bell	407	Overhaul / Return to Service

Shaft Assy, Aft	407-040-325-101, 407-040-325-105, 407-040-325-107	Bell	407	Overhaul/Return to Service
Lead / Lag Damper Assy	407-310-100-105, 407-310-100-107, 407-310-100-103	Bell	407	Overhaul / Return to Service
Shear Bearing	407-310-101-105, 407-310-101-107, 407-310-101-101, 407-310-101-103	Bell	407, 427	Overhaul / Return to Service
Lead Lag Bearing	407-310-102-103, 407-310-102-101, 4AA-310-102-103	Bell	407, 427	Overhaul / Return to Service / EXCHANGE ONLY
Rotor Brake Caliper	407-340-302-101, 407-340-302-101FM, 407-340-302-103, 407-340-302-103FM, 407-540-304-101FM	Bell	407	Overhaul IAW Northwest Dynamics.
Rotor Brake Disc	407-340-318-101, 4AA-340-318-101	Bell	407	Overhaul / Return to Service
Tail Rotor Hanger Ball Bearing Housing Assembly	407-340-339-107 41000408	Bell Bell	407 206A, 206B, 206B3	Overhaul Inspection Overhaul/Return to Service inspection
Piston	41000643, 41000515	Bell	212	Overhaul/ Return To Service
Cylinder	41000898			Overhaul/Return to Service
Cylinder	41006472			Overhaul/Return to Service
Drive Pin	412-010-166-101	Bell	412	Overhaul / Return to Service
Vib. Damper Lower Bridge	412-010-170-105	Bell	412	Overhaul / Return to Service
Spline Plate	412-010-177-101, 412-010-177-105, 412-010-177-117	Bell	412	Overhaul/Return to Service
Upper Cone Seat	412-010-186-101, 412-010-186-103	Bell	412	Overhaul/return to service
Leading / Trailing Edge Bracket Assembly	412-010-264-101, 412-010-264-105, 412-010-264-109, 412-010-264-111	Bell	412	Overhaul/Return to Service
Hub & Sleeve Assembly	412-010-401-113	Bell	412	Overhaul i.a.w. Bell CR&O. (412, C of C Only)
Hub & Sleeve Assembly	412-010-401-101, 412-010-401-103, 412-010-401-105, 412-010-401-107, 412-010-401-109, 412-010-401-111, 412-010-401-113, 412-010-401-115, 412-010-401-113FM, 412-010-401-117FM, 412-010-401-117, 412-010-	Bell	412	Overhaul IAW Bell CR&O.
Swashplate Assembly	412-010-402-113	Bell	412	Overhaul/Return to Service (Archive)
Drive Link	412-010-405-107, 412-010-405-109, 412-010-405-101, 412-010-405-111, 412-010-405-111FM	Bell	412	Overhaul / Return to Service
Drive Link	412-010-405-111, 412-010-405-	Bell	412	Overhaul / Return to Service (412, C of C Only)
Swashplate Outer Ring	412-010-407-117, 412-010-407-105	Bell	412	Overhaul / Return to Service

Pitch Link Assy	412-010-425-101, 412-010-425-121, 412-010-425-127, 412-010-425-133, 412-010-425-137, 412-010-425-135	Bell	412	Overhaul / Return to Service. (elastomeric rod end)
Pitch Link Assy	412-010-425-133, 412-010-425-137, 412-010-425-135, 412-010-425-139	Bell	412	Overhaul/Return to Service. (ball rod end)
Drive Hub Assembly	412-010-445-101, 412-010-445-105, 412-010-445-105R, 412-010-445-	Bell	412, AB412	Overhaul/Return to Service
Swashplate Support	412-010-453-105, 412-010-453-105R	Bell	412	Overhaul / Return to Service (Bell manual)
Lower Cone Seat	412-018-056-103, 412-018-056-105	Bell	412	Overhaul/Return to Service
Hub Assembly Cam Plate	412-018-060-111, 412-010-206-103	Bell	412	Overhaul / Return to Service
Transmission Assembly	412-040-004-103, 412-040-004-109, 412-040-004-127, 412-040-002-109, 412-040-004-109S, 412-040-004-127FM, 412-706-029-103, 412-706-029-107, 412-706-029-127, 412-040-002-113, 412-040-002-113FM	Bell	412	Overhaul in accordance with BHT CR&O
Transmission Assembly	412-040-004-103, 412-040-004-109, 412-040-004-127, 412-040-004-143, 412-040-004-143FM, 412-040-007-	Bell	412	Overhaul/Return to Service - Includes upgrade to -143FM.
Transmission Assembly	412-706-029-103, 412-706-029-107, 412-706-029-127	Bell	412	Overhaul/Return to Service, Max. Cont Pwr Kit
Transmission Assembly	412-040-004-123	Bell	412	Overhaul/Return to Service Instructions. (412 RSAF ONLY)
Main Driveshaft Assembly	412-040-005-103A	Bell	412	Overhaul I.A.W. Bell CR&O IAW AFTO 1H-412-5013 (AF Only)
Main Driveshaft Assembly	412-040-005-103	Bell	412	Overhaul I.A.W. Bell CR&O (412, C of C Only)
Main Driveshaft Assembly	412-040-005-101, 412-040-005-103	Bell	412	Overhaul I.A.W. Bell CR&O
Main Rotor Mast Liner	412-040-102-101, 412-040-102-103	Bell	412	Overhaul / Return to Service
Mast Plate Assembly	412-040-103-101	Bell	412	Overhaul and Return to Service.
Mast Assembly	412-040-366-103, 412-040-366-105, 412-040-366-109, 412-040-366-111, 412-040-366-113, 412-040-366-121	Bell	412	Overhaul i.a.w. Bell CR&O.
Mast Assembly	412-040-366-103, 412-040-366-105, 412-040-366-109, 412-040-366-111, 412-040-366-113, 412-040-366-121	Bell	412	Overhaul / Repair I.A.W. Bell CR&O. (412, C of C Only)
Mast Assembly	412-040-366-103, 412-040-366-105, 412-040-366-109, 412-040-366-111, 412-040-366-113, 412-040-366-121, 412-040-366-105FM, 412-040-366-129FM, 412-040-366-129	Bell	412, 412	Overhaul / Repair I.A.W. Bell CR&O.

Tail Rotor Hanger Assy	412-040-600-103, 412-040-600-101	Bell	412	Overhaul / Return to Service I.A.W. BHT
Tail Rotor Driveshaft Coupling Assy	412-040-601-103, 412-040-601-105, 412-040-601-107	Bell	412	Overhaul / Return to Service (412).
T/R driveshaft assy	412-040-621-105, 412-040-621-107, 412-040-621-101, 412-040-621-103	Bell	412	Overhaul / Return to Service
Coupling, Male, Crowned	412-040-626-101	Bell	412	Overhaul/Return to Service
Flanged Shaft	206-010-455-001, 206-010-455-103	Bell	206A, 206B, 206B3, 206L1, 206L3, 206L4, 206L	Overhaul / Return to Service
Main Input Pinion	412-040-700-103	Bell	412	Overhaul / Return to Service 412 CR&O
Universal Assy.	412-076-620-101	Bell	212, 412	Overhaul / Return to Service Inspection (Incl. Bearing R&R as Req'd)
Swashplate Assembly	427-010-401-101	Bell	427	Overhaul/Return to Service
Main Transmission Assembly	427-040-006-113, 427-040-006-111, 427-040-006-117, 427-040-006-119	Bell	427	Overhaul / Return to Service
Main Rotor Mast Assembly	427-040-011-101	Bell	427	Overhaul / Repair I.A.W. Bell CR&O.
Transmission Bottom Case	427-040-201-109	Bell	427	Overhaul/Return to Service
Transmission Top Case Assy	427-040-203-101	Bell	427	Overhaul/Return to Service
Cover Assy, T/R Drive, Transmission	427-040-213-101, 427-040-213-105	Bell	427, 429	Overhaul/Return to Service
Tail Rotor Gearbox	427-042-400-105	Bell	427	Overhaul/Return to Service Instructions
Input Adapter	427-042-440-103, 406-040-440-101, 407-040-440-101	Bell	407, 427	Overhaul/Return to Service
Fan Shaft Assembly	427-044-200-105, 427-044-200-107, 427-044-200-109, 427-044-200-111	Bell	427	Overhaul/Return to Service
Rotor Brake Caliper Assy	427-340-352-113	Bell	407	Overhaul IAW Northwest Dynamics.
Swashplate Assembly	429-010-400-101, 429-010-400-103	Bell	429	Overhaul IAW Bell CMM
Tail Rotor Hub Assembly	429-012-101-117, 429-012-101-121	Bell	429	Overhaul IAW Bell CMM (Outboard Assy)
Tail Rotor Hub Assembly	429-012-101-115	Bell	429	Overhaul IAW Bell CMM (Inboard Assy)
Main Transmission Assembly	429-040-006-115, 429-040-006-117, 429-040-006-123, 429-040-006-125, 429-040-006-109, 429-040-006-111, 429-040-006-119, 429-040-006-121	Bell	429	Overhaul IAW BHT Component Maintenance Manual
Main Rotor Mast Assembly	429-040-011-101, 429-040-011-103, 429-040-011-105	Bell	429	Overhaul IAW Bell CMM
Tail Rotor Gearbox Assy.	429-042-001-101	Bell	429	Overhaul IAW BHT Component Maintenance Manual
Forward Tail Rotor Driveshaft Assembly	429-044-100-103	Bell	429	Overhaul and Return to Service IAW MM (5,000 Hrs.)
Aft Tail Rotor Driveshaft	429-044-250-105	Bell	429	Overhaul and Return to Service IAW MM (5,000 Hrs.)

Main Rotor Hub Assembly	429-110-100-103, 429-110-100-107, 429-110-100-109	Bell	429	Overhaul IAW BHT Component Maintenance Manual
Oil Cooler Assembly	8543903, 206-360-501-101, 206-360-502-101, 8540554	Bell	206L	Overhaul / Repair per via approved vendor
Rotor Brake Assy	9450103-1	Bell	212, 412	Overhaul / Return to Service
Lever Assy	ACO43208	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service (ARCHIVED OH-0188-001)
Output Lug Assembly	C42641-90, C42641-38	Bell	206A, 206B	Overhaul / Return to Service
Cylinder	C42641-70	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Housing	C42641-16, C42641-11	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Input Trunnion	C42641-39	Bell	206A, 206B, 206B3	Overhaul / Return to Service
Scissors Link Assembly	C623A2005102, C623A2005103	Airbus Helicopters	EC120	Overhaul / Return to Service
Main Rotor Shaft	C632A1110102, C632A1110103, C632A1110104	Airbus Helicopters	EC120	Overhaul / Return to Service
Input Housing	C632A2103101	Airbus Helicopters	EC120	Overhaul / Return to Service (includes bearing replacement E1).
Main Case	C632A2116-102, C632A2116-101	Airbus Helicopters	EC120	Overhaul and return to service.
Lower Housing Assembly	C632A2117101	Airbus Helicopters	EC120	Overhaul / Return to Service
Input Housing	C632A2181101, C632A2181102	Airbus Helicopters	EC120	Overhaul / Return to Service (includes E1/E2, NDT, prime/paint)
Rotor Brake Housing	D0134-5, D0134-6, D0134-9	Bell	206L4, 407	Overhaul I.A.W. BHT CR&O.
Support/Preassy	E621M1009101, L621M1009101, L621M1009102, L621M1009205, L621M1009206	Airbus Helicopters	EC135	Overhaul / Return to Service
Sliding Sleeve Assy	L623M2006103, L623M2006102, L009M6232881, L009M6233881, L009M6234881, L623M2006101	Airbus Helicopters	EC135	Overhaul / Return to Service
Helical Tube	L623M4002104	Airbus Helicopters	EC135	Overhaul / Return to Service

Helical Lever Assembly	L623M4003101, L623M4003102	Airbus Helicopters	EC135	Overhaul / Return to Service
Tail Rotor Pitch Change Spider	L642A2004101	Airbus Helicopters	EC135	Overhaul - includes removal & replacement of elliptical bushings
Shaft Long Assy	L651M2008101	Airbus Helicopters	EC135	Overhaul / Return to Service
Cyclic Lever	L671M3011101, L671M3011103, L671M3011102	Airbus Helicopters	EC135	Overhaul / Return to Service
Forked Lever Assy.	L671M3012102	Airbus Helicopters	EC135	Overhaul / Return to Service
Bearing Block	L671M3013101, L671M3013102	Airbus Helicopters	EC135	Overhaul / Return to Service (includes bearing replacement)
Plug (-031/-107 Servo)	MS9015-07	Bell	206B, 206B3, TH-67	Overhaul / Return to Service
Piston rod	S6265-62593-6, S6265-62593-4, S6265-62593-5	Airbus Helicopters	AS330	Overhaul of piston rod includes chrome plating (CT22:30.10.880).
Servo Control Assembly	SC8042, SC8043	Airbus Helicopters	EC130, AS355NP	Overhaul / Return to Service (O.P.)
Isolation Mount Yoke	Y-39001-11-1	Bell	206A, 206B, 206B3	Overhaul / Return to Service

Part Description 部件名称	Part Number 件号	Model 机型	Type 型号	Description 工作内容
Mast Assembly	407-040-011-101	Bell	Bell407	60 months
Transmission	407-040-006-103/407-040-007-103	Bell	Bell407	60 months
Freewheel	406-040-500-123	Bell	Bell407	60 months
Tail Rotor Gearbox	406-040-400-115	Bell	Bell407	60 months
Hub Assembly	407-010-100-103	Bell	Bell407	2500 hours
Swashplate and Support	406-010-401-115	Bell	Bell407	2500 hours
Input Driveshaft	206-340-300-107	Bell	Bell407	1250 hours
Rotor Brake Disc	206-340-301-101	Bell	Bell407	3000 hours
Rotor Brake Caliper	206-340-301-103	Bell	Bell407	1800 hours
Freewheel	406-040-500-123	Bell	Bell407	3000 hours
Transmission	407-040-006-103/-107	Bell	Bell407	2500 hours
Transmission	407-040-006-111	Bell	Bell407	4500 hours
Transmission	407-040-006-115/-123/-127	Bell	Bell407	5000 hours
Transmission	407-040-007-103	Bell	Bell407	5000 hours
Mast Assembly	407-040-011-101	Bell	Bell407	2500 hours
Rotor Brake Caliper	407-340-302-101	Bell	Bell407	1800 hours
Rotor Brake Caliper	407-340-302-101FM	Bell	Bell407	1800 hours
Rotor Brake Caliper	407-340-302-103	Bell	Bell407	3000 hours
Input Driveshaft	407-340-310-101	Bell	Bell407	2500 hours
Rotor Brake Disc	407-340-318-101	Bell	Bell407	12000 hours
Rotor Brake Caliper	407-540-304-101FM	Bell	Bell407	3000 hours
Rotor Brake Caliper	427-340-352-113	Bell	Bell407	3600 hours
Tail Rotor Gearbox	406-040-400-115/-117/-	Bell	Bell407	2500 hours
Tail Rotor Gearbox	406-040-400-119	Bell	Bell407	5000 hours
Tail Rotor Hub	407-012-101-107	Bell	Bell407	2500 hours
Starter-generator	206-062-200-113	Bell	Bell407	1000 hours
250--C47B engines	23063392 or M250-10672	Bell	M250-C47B	2000 hours
Turbine Assembly	23063354 or M250-10557	Bell	M250-C47B	2000 hours
Fuel Nozzle	6899001 or 23077067, 23077188	Bell	M250-C47B	2000 hours
Compressor Bleed Valve	23005366 or 23073353	Bell	M250-C47B	1500 hours
Hydromechanical Unit(HMU)	23078032	Bell	M250-C47B	2500 hours
Transmission	206-040-004-115 and subsequent	Bell	Bell206	60 months
Freewheel	406-040-500-143 or	Bell	Bell206	60 months
Swashplate and Support	206-010-450-101	Bell	Bell206	4800 hours
Hub Assembly	206-011-100-105	Bell	Bell206	2400 hours
Transmission	206-040-004-115	Bell	Bell206	4500 hours
Mast Assembly	206-040-014-107	Bell	Bell206	3000 hours

Input Driveshaft	206-340-300-101/-105	Bell	Bell206	2500 hours
Freewheel Unit	406-040-500-113	Bell	Bell206	3000 hours
Tail Rotor Hub Assembly	206-011-810-139	Bell	Bell206	2500 hours
Tail Rotor Gearbox	206-040-402-101	Bell	Bell206	6000 hours
Hydraulic Servo	206-076-062-101	Bell	Bell206	3600 hours
MAIN GEAR BOX	350A32-0010-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
MAIN GEAR BOX	350A32-0011-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
MAIN GEAR BOX	350A32-0012-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
EPICYCLIC REDUCTION GEAR	350A32-0100-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
EPICYCLIC REDUCTION GEAR	350A32-0110-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
EPICYCLIC REDUCTION GEAR	350A32-0120-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
BEVEL REDUCTION GEAR	350A32-0300-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
BEVEL REDUCTION GEAR	350A32-0310-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
OIL PUMP	350A32-0400-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
TGB	350A33-0200-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
TGB	350A33-0210-**-**	Airbus Helicopters	AS350	Overhaul / Return to Service
Start Generator	515-030 (704A46101018)	Airbus Helicopters	AS350	Overhaul / Return to Service
	524-031 (704A46101011)	Airbus Helicopters	AS350	Overhaul / Return to Service
Start Generator	150SG122Q (704A46101020)	Airbus Helicopters	AS350	Overhaul / Return to Service
Start Generator	200SGL130Q (704A46101023)	Airbus Helicopters	AS350	Overhaul / Return to Service
Start Generator	150SG122Q-4 (704A46101027)	Airbus Helicopters	AS350	Overhaul / Return to Service
	200SG130Q-4 (704A46101026)	Airbus Helicopters	AS350	Overhaul / Return to Service
Main servo	SC5083-1	Airbus Helicopters	AS350	Overhaul / Return to Service
Main servo	SC5084-1	Airbus Helicopters	AS350	Overhaul / Return to Service
Main servo	SC8042	Airbus Helicopters	AS350	Overhaul / Return to Service
Main servo	SC8043	Airbus Helicopters	AS350	Overhaul / Return to Service
Tail servo	SC5072	Airbus Helicopters	AS350	Overhaul / Return to Service
Main Rotor Shaft	C632A1110102/03/04	Airbus Helicopters	EC120	Overhaul / Return to Service
Servo Control Assembly	SC8042, SC8043	Airbus Helicopters	EC130	Overhaul / Return to Service
Tail Rotor Hub Body	350A33-3120-01	Airbus Helicopters	EC130	Overhaul / Return to Service
Shaft Assembly	109-0619-38-105	Agusta	A109A	Overhaul / Return to Service
Top Rotating Scissor	3G6230A00834	Agusta	AW139	Overhaul / Return to Service
Bottom Rotating Scissors Assy	3G6230A00932	Agusta	AW139	Overhaul/Return to Service
Nose Landing Gear	1944E1000-	Sikorsky	S-76	Overhaul i.a.w. Godrich CMM.
Main Landing Gear	1945E1000C01	Sikorsky	S-76	Overhaul i.a.w. Goodrich CMM.
Lower drag brace	1945E74-10, 2071-74-10	Sikorsky	S-76	Overhaul/Return to Service
Nose Landing Gear Piston	2070-4, 1944E4	Sikorsky	S-76	Overhaul/Return to Service
Main Landing Gear Piston	2071-4, 1945E4	Sikorsky	S-76	Overhaul / Return to Service.