

Part Description 部件名称	Part Number 件号	OEM 原始设备制造商	Model 机型	Description 工作内容
Input Housing	350A08-1635-20	Airbus Helicopters	AS350	Return to Service
Input Housing	350A08-1635-20	Airbus Helicopters	AS350	Repair corrosion on outboard face (E1)
Input Housing	350A08-1635-20	Airbus Helicopters	AS350	Prime & Paint
Gimbal Case	350A08-1635-21	Airbus Helicopters	AS350	Overhaul and Return to Service
Gimbal Case	350A08-1635-21	Airbus Helicopters	AS350	Blend damage on Hydraulic pump tension mount lug.
Input Housing	350A08-1635-20	Airbus Helicopters	AS350	Modification to 350A32-3126.21 (Milling 70mm radius, Type 3 repair)
TGB Actuating Rod	350A27-1910-0401	Airbus Helicopters	AS350	Replacement of a worn/damaged bearing.
TGB Actuating Rod	350A27-1910-0401	Airbus Helicopters	AS350	Overhaul/Repair (includes NDT, Paint, & replacing heat shrink sleeves (5ea)
Vertical Shaft	350A32-3107-23	Airbus Helicopters	AS350	Remove damage and flame plating (Change .23 to .25) (Type 3)
Input Housing	350A32-3126-20, 350A32-3126-21	Airbus Helicopters	AS350	Return to Service USE OH-0828-001
Input Housing	350A32-3126-20, 350A32-3126-21	Airbus Helicopters	AS350	Repair corrosion on outboard face (E1)
Input Housing	350A32-3126-20, 350A32-3126-21	Airbus Helicopters	AS350	Prime & Paint
Input Housing	350A32-3126-20	Airbus Helicopters	AS350	Modification to .21 (Milling 70mm radius, Type 30 repair)
Input Housing	350A32-3126-20, 350A32-3126-21	Airbus Helicopters	AS350	Overhaul/Return to Service
Oil Pump Casing	350A32-3930-00, 350A32-3930-01	Airbus Helicopters	AS350	Remove and replace worn bushings (E1) with bore repair (E2) if req'd.
Rotor Brake Lining Support Assembly	350A32-5010-00	Airbus Helicopters	AS350	Remove and replace worn pad.
Pitch Change Spider	350A33-2030-00	Airbus Helicopters	AS350	Overhaul/Return to Service
Control Rod	350A33-2121-01	Airbus Helicopters	AS350	Overhaul / Return to Service (price includes all repairs).
Rotating Star	350A33-2129-00, 350A33-2129-21, 350A33-2129-03	Airbus Helicopters	AS350	Overhaul / Return to Service
Rotating Star	350A33-2129-00, 350A33-2129-21, 350A33-2129-03	Airbus Helicopters	AS350	Prime and Paint
Rotating Star	350A33-2129-00, 350A33-2129-21, 350A33-2129-03	Airbus Helicopters	AS350	Replace worn/damaged bushings (E1), with bore repair if req'd (E2).
Rotating Star	350A33-2129-00, 350A33-2129-21, 350A33-2129-03	Airbus Helicopters	AS350	Removal of seals and the two split bushes (E3).
T/R pitch change rod	350A33-2143-00, 350A33-2143-01	Airbus Helicopters	AS350	Overhaul / Return to Service (price includes all repairs).
Pitch Control Rod	350A33-2145-01, 350A33-2145-00	Airbus Helicopters	AS350	Overhaul / Return to Service (price includes all repairs).
Spherical Bearing Yoke	350A33-2150-01, 350A33-2150-00	Airbus Helicopters	AS350	Remove and replace spherical bearing (E1)
Spherical Bearing Yoke	350A33-2150-01, 350A33-2150-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Hydraulic Pump Drive Assy	350A35-0131-01	Airbus Helicopters	AS350	Overhaul/ Return to Service
Shaft, Coupling	350A35-1100-21, 350A35-1100-20	Airbus Helicopters	AS350	Overhaul/Return to Service. (.20 becomes .21)

Flared Housing Assy	350A35-1102-05, 350A35-1102-01, 350A35-1102-02	Airbus Helicopters	AS350	Overhaul/ Return to Service
Flared Housing Assy	350A35-1102-05, 350A35-1102-01, 350A35-1102-02	Airbus Helicopters	AS350	Remove and replace bushings (E2) with bore repair (E4) if req'd.
Gimbal Case	350A35-1104-03, 350A35-1104-01, 350A35-1104-02, 350A35-1093-00	Airbus Helicopters	AS350	Removal and replacement of the bushings.
Gimbal Case	350A35-1104-03, 350A35-1104-01, 350A35-1104-02, 350A35-1093-00	Airbus Helicopters	AS350	Prime and paint.
Gimbal Case	350A35-1104-03, 350A35-1104-01, 350A35-1104-02, 350A35-1093-00, 350A35-1104-21	Airbus Helicopters	AS350	Return to service.
Gimbal Ring	350A35-1105-00	Airbus Helicopters	AS350	Removal and replacement of the bushings (4 possible locations) (E1).
Gimbal Ring	350A35-1105-00	Airbus Helicopters	AS350	Prime and paint.
Gimbal Ring	350A35-1105-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Swashplate Assembly	350A37-1004-11, 350A37-1004-09	Airbus Helicopters	AS350	Overhaul I.A.W. MRV.
Trans. Crossbeam Bushing	350A38-1035-20, 350A38-1035-21, 350A38-1035-22	Airbus Helicopters	AS350	Fabrication of Crossbeam Bushings (350A38-1035-20/-21/-22)
Shock Absorber	350A75-2050-06, 350A75-2050-05	Airbus Helicopters	AS350	Overhaul/Return to Service
Shock Absorber	350A75-2080-00	Airbus Helicopters	AS350	Overhaul / Return to Service
Valve Assy, Servo	ACO43965	Airbus Helicopters	AS350	Worn/Damaged Bore of Servo Valve Body (RP1062)
AS350	AS350, AS350B, AS350B2, AS350B1, AS350B3	Airbus Helicopters	AS350, AS350B2, AS350B3, AS350B, AS350B1	Strip and repaint exterior coating system per customer work order
Pitch Horn Assy	350A12-1368-04	Airbus Helicopters	AS350, AS355	Overhaul/Return to Service.
Support Assy	350A31-2019-02, 350A31-2019-00	Airbus Helicopters	AS350, AS355	Overhaul/ Return to Service
Support Assy	350A31-2019-02, 350A31-2019-00	Airbus Helicopters	AS350, AS355	Remove and replace rivets used to connect the two
Inlet Flange	350A32-3088-01, 350A32-3088-00, 350A32-3088-20	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Inlet Flange	350A32-3088-01, 350A32-3088-00, 350A32-3088-20	Airbus Helicopters	AS350, AS355	Repair of surface Magnetic (E1)
Main Transmission Case	350A32-3121-01, 350A32-3121-02, 350A32-3121-05	Airbus Helicopters	AS350, AS355	Convert -01 to -02, then -02 to -05 (MOD 7158, Repair .05 and .02)
Main Transmission Case	350A32-3121-01	Airbus Helicopters	AS350, AS355	Repair of oil pressure boss mount stud holes (Helicoil)
Main Transmission Case	350A32-3121-01	Airbus Helicopters	AS350, AS355	Repair of oil jet bore (Post LRS modification)
Swashplate Guide	350A37-1181-01, 350A37-1181-00, 350A37-1181-02	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service

Swashplate Guide	350A37-1181-01, 350A37-1181-00, 350A37-1181-02	Airbus Helicopters	AS350, AS355	Replace Teflon Tape
Stirrup (Yoke)	350A37-1228-21, 350A37-1228-22, 350A37-1228-23	Airbus Helicopters	AS350, AS355	Prime & Paint
Stirrup (Yoke)	350A37-1228-21	Airbus Helicopters	AS350, AS355	Retrofit -21 to -22
Stirrup (Yoke)	350A37-1228-22	Airbus Helicopters	AS350, AS355	Retrofit -22 to -23
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Repair mounting bores
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Prime and paint.
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Fabrication of -23/-24/-25 replacement bushing(s).
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Fabrication of -27/-28/-29 replacement bushing(s).
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Fabrication of -20/-21/-22 replacement bushing(s).
Transmission Crossbeam	350A38-1040-20, 350A38-1018-32	Airbus Helicopters	AS350, AS355	Overhaul/Return to Service.
Transmission Crossbeam	350A38-1040-20	Airbus Helicopters	AS350, AS355	Repair mounting bores
Universal Joint Yoke	355A35-2001-01, 355A35-2001-02	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Universal Joint Yoke	355A35-2001-01, 355A35-2001-02	Airbus Helicopters	AS350, AS355	Remove and replace bushings (E1)
Ring, Universal Joint	355A35-2003-01	Airbus Helicopters	AS350, AS355	Remove and Replace Bushings (E1)
Ring, Universal Joint	355A35-2003-01	Airbus Helicopters	AS350, AS355	Overhaul / Return to Service
Compensator, Tail Rotor	355A75-1370-03, 355A75-1371-00	Airbus Helicopters	AS350, AS355	Replace worn/damaged bearing.
Lever Assy	ACO43208	Airbus Helicopters	AS350, AS355	Overhaul/Return to Service (ARCHIVED OH-0188-001)
Lever Assy	ACO43208	Airbus Helicopters	AS350, AS355	Replace worn/damaged bearing (ARCHIVED SEE RP-0188-004)
Lever Assy	ACO43208	Airbus Helicopters	AS350, AS355	Repair damaged hinge pin "B" bushings. (ARCHIVED SEE RP-0188-003)
Valve Assy	ACO43964	Airbus Helicopters	AS350, AS355	Worn/Damaged Bore of Servo Valve Body (RP1061)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair lower mounting flange (E7)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair 72mm bore (E1)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Modify from -00 to -01 (Machine pin hole) -(01)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair 126mm bore (E2)

Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair the 136mm bore (E3)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair the damage in oil duct (Type KA repair)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair corrosion around input face studs
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Remove old studs from various locations, and install lockringed studs (E4)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Overhaul / Return to Service
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-04, 350A32-3121-06	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS350BB	Repair damage on input face and replace studs (E5)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Repair upper mounting flange (E6)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Repair lower flange upper surface with shim (J)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Repair upper flange lower surface with shim. (H)

Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Prime and Paint (includes E8 scheme).
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Repair damage on the bellcrank and/or pressure switch bosses
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Repair upper and lower flange bolt holes (LA)
Main Transmission Case	350A32-3121-00, 350A32-3121-01, 350A32-3121-02, 350A32-3121-03, 350A32-3121-04, 350A32-3121-05, 350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Replace oil filler cap (E9)
Main Transmission Case	350A32-3121-06, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS350B2, AS350B3, AS355NP, AS350BB	Remove and replace dia. 74 mm bushing (E10).
TGB Control Lever	350A33-1058-03, 350A33-1058-02	Airbus Helicopters	AS350, AS355, AS355N	Remove and Replace Carbide Bushings with bore repair (02-E1 & E2)
TGB Control Lever	350A33-1058-03, 350A33-1058-02	Airbus Helicopters	AS350, AS355, AS355N	Overhaul / Return to Service
TGB Control Lever	350A33-1058-03, 350A33-1058-02	Airbus Helicopters	AS350, AS355, AS355N	Prime and Paint instructions.
Main Transmission Case	350A32-3121-05, 350A32-3121-07	Airbus Helicopters	AS350, AS355, AS355NP	Replace Oil Filler Cap (-05 & -07 Main Case)
Blade Pin	350A31-1771-21, 350A31-1770-01, 350A31-1771-20	Airbus Helicopters	AS350, AS355, EC130	Overhaul / Return to Service
Ring Gear	350A32-1051-21, 350A32-1051-20	Airbus Helicopters	AS350, AS355, EC130, AS355NP	Repair of flange mounting surfaces (Type A)

Ring Gear	350A32-1051-21, 350A32-1051-20	Airbus Helicopters	AS350, AS355, EC130, AS355NP	Overhaul / Return to Service
Mixing Unit	350A27-0250-0401, 350A27-0250-0201	Airbus Helicopters	AS350, AS355, EC130B4, EC130T2, AS350B2, AS350B3	Overhaul / Return to Service
Driving Gear	355A32-2002-21	Airbus Helicopters	AS350, AS355NP	Repair of the 47 mm diameter by Nickel Plating (Type A)
Driving Gear	355A32-2002-21	Airbus Helicopters	AS350, AS355NP	Repair of 60mm diameter (Type CA)
Driving Pulley	350A35-1091-20	Airbus Helicopters	AS350, EC130	Overhaul / Return to Service
Vertical Shaft	350A32-3107-22, 350A32-3107-23, 350A32-3107-24, 350A32-3107-25	Airbus Helicopters	AS350, EC130B4, EC130T2, AS355NP	Repair of 169 mm diameter (CA or EC).
Vertical Shaft	350A32-3107-25	Airbus Helicopters	AS350, EC130B4, EC130T2, AS355NP	Recondition flame spray on flange and adjacent diameter (E1).
Vertical Shaft	350A32-3107-23, 350A32-3107-25	Airbus Helicopters	AS350, EC130B4, EC130T2, AS355NP	Overhaul / Return to Service
Flared Housing Assy	350A35-1103-01, 350A35-1103-02, 350A35-1103-03	Airbus Helicopters	AS350BA	Overhaul/ Return to Service (Includes E1 & MOD 079533 -02 to -03 if req'd)
Main Transmission Case	350A32-3121-02	Airbus Helicopters	AS355	Repair of 73mm bore with flanged bushing for S/N: OZGES
Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03, 355A32-2004-04	Airbus Helicopters	AS355	Repair of the 184mm center bore
Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03, 355A32-2004-04	Airbus Helicopters	AS355	Repair of short and long mounting flange bolt holes.
Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03	Airbus Helicopters	AS355	Repair of mounting flange bolt holes of the center bore
Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03, 355A32-2004-04	Airbus Helicopters	AS355	Prime & Paint

Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03, 355A32-2004-04	Airbus Helicopters	AS355	Return to Service.
Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03, 355A32-2004-04	Airbus Helicopters	AS355	Repair Left and / or Right Input Quill Bores (130mm bores)
Combining Gearbox Fwd	355A32-2004-00, 355A32-2004-01, 355A32-2004-02, 355A32-2004-03, 355A32-2004-04	Airbus Helicopters	AS355	Overhaul/Return to Service
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Repair the 95mm bores (A)
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Prime & Paint
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Return to Service.
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Repair hydraulic pump mating face(s)
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Repair 89mm bores (Type BE).
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Repair of 120 mm bore (face and bore) (Type CE)
Combining Gearbox Aft	355A32-2005-00, 355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Repair of 120mm bore (face and bore) above the bore pin
Combining Gearbox Aft	355A32-2005-03	Airbus Helicopters	AS355	Repair of alignment dowel bushing bores (DA) (2 locations)
Combining Gearbox Aft	355A32-2005-01, 355A32-2005-02, 355A32-2005-03	Airbus Helicopters	AS355	Overhaul/Return to Service
Upper Flange	355A32-2020-01	Airbus Helicopters	AS355	Remove & replace bushings, and install oversize bushings as necessary
Compensator, Tail Rotor	355A75-1370-03	Airbus Helicopters	AS355	Remove / Replace Leaking Seals
Main Transmission Case	350A32-3121-03, 350A32-3121-04	Airbus Helicopters	AS355, AS350B2, AS350B3, AS350BB	Convert .03 to .07 or .04 to .06 by implementing Modification 7183.
Main Rotor Mast	350A37-1076-05	Airbus Helicopters	AS355E, AS355F, AS355F1	Overhaul (Repair as Required)

Lower Rotor Mast Housing	350A37-1195-00, 350A37-1195-01, 350A37-1195-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Machine the 2 ribs (MOD 6105)
Lower Rotor Mast Housing	350A37-1195-00, 350A37-1195-01, 350A37-1195-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Remove and replace the lug bushings (E2).
Lower Rotor Mast Housing	350A37-1195-00, 350A37-1195-01, 350A37-1195-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Prime & Paint
Lower Rotor Mast Housing	350A37-1195-00, 350A37-1195-01, 350A37-1195-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Return to Service
Lower Rotor Mast Housing	350A37-1195-00, 350A37-1195-01, 350A37-1195-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Repair lower mount bolt holes
Lower Rotor Mast Housing	350A37-1195-00, 350A37-1195-01, 350A37-1195-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Repair of corroded bolt hole spot faces. (E4)
Upper Rotor Mast Housing	350A37-1196-02, 350A37-1196-03, 350A37-1196-00, 350A37-1196-01, 350A37-1196-04, 350A37-1196-09	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Return to Service
Upper Rotor Mast Housing	350A37-1196-02, 350A37-1196-03, 350A37-1196-01, 350A37-1196-04, 350A37-1196-09, 350A37-1196-08	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350	Prime and paint.

Pitch Horn	350A31-1877-02, 350A31-1878-20, 350A31-1878-21, 350A31-1878-22, 350A31-1878-23, 350A31-1878-24, 350A31-1878-25	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA	Replacement of the bushings, including repair of the holes as required.
Housing Assy, Flared	355A35-2002-01, 355A35-2002-04, 355A35-2002-02, 355A35-2002-03, 355A35-2002-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355	Overhaul / Return to Service
Housing Assy, Flared	355A35-2002-01, 355A35-2002-04, 355A35-2002-03, 355A35-2002-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355	Remove and Replace bushing (E1)
Hydraulic Servo Actuator	SC5072, SC5084, SC5083, SC5083-1, SC5084-1	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, AS330, AS355N, AS355NP	Overhaul/Return to Service (O.P.)
Non-Rotating Star	350A37-1002-04, 350A37-1002-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, AS355N, AS355NP	Modify to .06 by machining and installing stirrups (06)

Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Repair of the 157 mm uniball bore (AE) or replace existing sleeve (EA).
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Overhaul/Return to Service
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Application of polyurethane varnish (E6), prime and paint.
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Remove and replace control arm bushings, with bore repair (E1).
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Remove and replace scissors link bushings, with bore repair (E2)

Non-Rotating Star	350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Replace damaged or missing stirrups (E10)
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Fill bores with Devcon (Mod 6124)
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Replace 12mm barrel nut bushings (E7) (Required for RP-0008-001)
Non-Rotating Star	350A37-1002-02, 350A37-1002-03, 350A37-1002-04, 350A37-1002-05, 350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Repair of the upper mounting surface (E8)
Non-Rotating Star	350A37-1002-06, 350A37-1002-07	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Conversion of .06 to .07 (MOD 07.6181).

Link, Scissors	350A37-1126-02, 350A37-1126-01, 350A37-1126-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Replacement of the bushings (E1).
Link, Scissors	350A37-1126-02, 350A37-1126-01, 350A37-1126-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Prime and paint (includes modification of -01 to -02, if requested).
Link, Scissors	350A37-1126-02, 350A37-1126-01, 350A37-1126-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, AS355, EC130, AS355N, AS355NP	Overhaul / Return to Service
Pitch Horn	350A31-1877-02, 350A31-1878-21, 350A31-1877-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Overhaul / Return to Service

Fixed Ring Gear	350A32-1086-20, 350A32-1086-21, 350A32-1086-23	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair of damaged flange face(s). (Type A)
Fixed Ring Gear	350A32-1086-20, 350A32-1086-21, 350A32-1086-23	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Prime/Paint
Scissors Link	350A37-1127-02, 350A37-1127-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Replacement of Bearing (E1)
Scissors Link	350A37-1127-02, 350A37-1127-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Overhaul / Return to Service

Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Repair of hydraulic lines and pressure testing.
Upper Rotor Mast Housing	350A37-1291-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Return to Service. USE OH-0680-001
Upper Rotor Mast Housing	350A37-1291-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Replace bushings (E1), with bore repair (AA) if required.
Upper Rotor Mast Housing	350A37-1291-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Prime & Paint
Upper Rotor Mast Housing	350A37-1291-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Overhaul/Return to Service

Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Repair upper mast spacer bore (Above Groove Only)
Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Repair of the servo mounting lugs.
Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Return to Service (USE OH-0237-001)
Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Replace worn/damaged bushings (E2).
Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Prime & Paint

Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Overhaul/Return to Service
Lower Rotor Mast Housing	350A37-1292-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350, EC130, AS355N, AS355NP	Repair of hydraulic lines and pressure testing. (E3)
PLANET PINION CARRIER	350A32-1103-21, 350A32-1103-20	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B, AS350B1, AS350BA, AS350BB	Repair of fretting damage to surface "A" (E2)
Main Rotor Mast	350A37-1076-07, 350A37-1076-10, 350A37-1076-11, 350A37-1076-12	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Overhaul (Repair as Required)

Main Rotor Mast	350A37-1076-04, 350A37-1076-05, 350A37-1076-06, 350A37-1076-07, 350A37-1076-10, 350A37-1076-11, 350A37-1076-12	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Return to Service
Main Rotor Mast	350A37-1076-04, 350A37-1076-05, 350A37-1076-06, 350A37-1076-07, 350A37-1076-10, 350A37-1076-11, 350A37-1076-12	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair damaged chamfer (E7)
Tail Rotor Gearbox Hsg	350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS350BA, AS350BB	Replacement of damaged studs (item #170)
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Replacement of the yoke bushings (E1) with bore repair if required (E2).

Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair of the 50 mm bore. (Type AA)
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair of the 74 mm bore. (E3)
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair of the 70 mm bore. (E4)

Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair of the 134 mm bore. (E5)
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Prime & Paint.
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair yoke inner faces (Type B) and replacement of yoke bushings (E1)

Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Replace L/H lug bushing (E6), with bore repair (E7) if required.
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01, 350A33-1090-02	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Overhaul/Return to Service
Control Lever	350A33-1526-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Overhaul/Return to Service

Control Lever	350A33-1526-00	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Remove and replace carbide bushings (E1)
Main Rotor Mast	350A37-1290-02, 350A37-1290-03, 350A37-1290-00, 350A37-1290-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Overhaul (converts -00 to -02 or -01 to -03). SEE NOTES
Tail Rotor Driveshaft	350A33-1092-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS350D	Repair of the shaft O.D. and bearing journals

Tail Rotor Driveshaft	350A33-1092-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS350D	Return to Service Inspection (includes primer in ID)
Tail Rotor Driveshaft	350A33-1092-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS350D	Replace key at end of shaft.
Tail Rotor Gearbox Hsg	350A33-1090-00, 350A33-1090-01	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, AS350B2, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Convert .00 into .01 by polishing the web between the lug ears (mod 8535)

Pitch Horn	350A31-1877-02, 350A31-1877-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Prime / Paint
Pitch Horn	350A31-1877-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Removal of bushings and replacement of the stop bushing
Pitch Horn	350A31-1877-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Replacement of the blade horn bushings (E6 repair).

Pitch Horn	350A31-1877-03	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Oversize bores and replacement of the blade horn bushings (E7 repair).
Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair of lower surface of mount flange w/shim (Type GA), or replace existing shim (Repair EG).

Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair upper/lower surfaces of mounting flange. (machining only) (E4)
Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair 127mm O.D. (Type AE)

Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Prime & Paint
Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Replace the Torque Mount Bushings with Straight Bushings (E2)

Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair torque mount bolt holes with flanged bushings (Type BE)
Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair bolt holes (HA)

Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair the 180mm bore (Type CE)
Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Repair torque mount pads (shim) (JA) (J1)

Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Modification of the magnetic plug bore. (E5) (Post MOD 7175)
Lower Transmission Case	350A32-3119-03, 350A32-3119-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB	Overhaul / Return to Service

Main Rotor Mast	350A37-1290-02, 350A37-1290-03, 350A37-1290-04, 350A37-1290-00, 350A37-1290-01, 350A37-1290-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS550, AS555AN	Overhaul
Main Rotor Mast	350A37-1290-02, 350A37-1290-03, 350A37-1290-04, 350A37-1290-00, 350A37-1290-01, 350A37-1290-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS550, AS555AN	350A37-1290-E1, which includes MOD 6201 & 6156. (Converts a .02 to .04 or .03 to .05)

Main Rotor Mast	350A37-1290-02, 350A37-1290-03, 350A37-1290-04, 350A37-1290-00, 350A37-1290-01, 350A37-1290-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS550, AS555AN	Repair of the top mounting flange surface. (E2)
Main Rotor Mast	350A37-1290-02, 350A37-1290-03, 350A37-1290-04, 350A37-1290-00, 350A37-1290-01, 350A37-1290-05	Airbus Helicopters	AS355E, AS355F, AS355F1, AS355F2, EC130B4, EC130T2, AS350B2, AS350B3, AS355N, AS355NP, AS350B, AS350B1, AS350BA, AS350BB, AS550, AS555AN	NTO requirements for corrosion on top mounting surface.
Oil Pump Casing	355A32-2021-01, 355A32-2021-02, 355A32-2145-00, 355A32-2145-01	Airbus Helicopters	AS355F1, AS350, AS355	Remove & replace bushings, and install oversize bushings as necessary
Bevel Gear Wheel Support Assy	360A32-3162-02, 360A32-3162-03, 360A32-3162-04	Airbus Helicopters	AS365	Overhaul/Return to Service
Bevel Gear Wheel Support Assy	360A32-3162-02, 360A32-3162-03, 360A32-3162-04	Airbus Helicopters	AS365	Surface treat and primer
Bevel Gear Wheel Support Assy	360A32-3162-02	Airbus Helicopters	AS365	Repair locating holes (Type A) (2 possible)

Bevel Gear Wheel Support Assy	360A32-3162-02, 360A32-3162-03, 360A32-3162-04	Airbus Helicopters	AS365	Eliminate corrosion on upper face (E1)
Bevel Gear Wheel Support Assy	360A32-3162-02, 360A32-3162-03, 360A32-3162-04	Airbus Helicopters	AS365	Repair worn/damaged 394mm diameter (Type BA)
Bevel Gear Wheel Support Assy	360A32-3162-02, 360A32-3162-03	Airbus Helicopters	AS365	Repair worn/damaged 8.5mm dia. (Type C) (32 or 52 possible)
Bevel Gear Wheel Support Assy	360A32-3162-02, 360A32-3162-03, 360A32-3162-04	Airbus Helicopters	AS365	Repair worn/damaged 224mm dia. (Type DA)
Main Transmission Case	360A32-1128.21	Airbus Helicopters	AS365	Fabrication of DET-0875 (360A32-1128.21) for MOD 63B90.
Aft Casing, RH	365A32-4342-03, 365A32-4342-02	Airbus Helicopters	AS365	Repair worn/damaged 57mm bore.
Aft Casing, RH	365A32-4342-03, 365A32-4342-02	Airbus Helicopters	AS365	Repair worn/damaged 9mm locator pin hole.
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Overhaul/ Return to service
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Prime / Paint
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Replace worn/damaged bushings (E1) with 11mm bore repair (A) if required.
Reduction Housing	365A32-5048-01	Airbus Helicopters	AS365	Mod from -01 to -02, Type 3 (systematic w/ overhaul of -01)
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Repair 25mm bore (or replace existing bushing) (C)
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Replace 10.5mm bushing (D)
Reduction Housing	365A32-5048-02, 365A32-5048-01	Airbus Helicopters	AS365	Repair the 11.5 mm bore (F)
Gimbal Ring	DET-1364	Airbus Helicopters	AS365	Bushing fabrication (DET-1364)
Bearing	365A32-1685-01, 365A32-1685-03	Airbus Helicopters	AS365, AS365N, AS365N1, AS365N2, AS365N3, AS366G1, AS366GA	Overhaul Inspection and Dynamic Testing
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1	MOD 0763B76 - Removal and replacement of studs in 32 locations. (Dash number is raised)
Main Transmission Case	365A32-2049-07, 365A32-2049-08	Airbus Helicopters	AS365, AS366G1	Servo mounting surface washer installation.
Main Transmission Case	365A32-2046-16	Airbus Helicopters	AS365, AS366G1	Repair of the supply tube locating 9.5mm dia. (Type KA)
Tail Rotor Spider	365A33-2174-00	Airbus Helicopters	AS365, AS366G1	Remove & Replace Bushings (Includes Re-Painting)
Rotating Star	365A31-1100-04, 365A31-1100-05	Airbus Helicopters	AS365, AS366G1, AS366GA	Prime and paint (includes E1 repair).

ROTOR SHAFT	365A31-1179-00, 365A31-1179-02, 365A31-1179-03, 365A31-1179-04, 365A31-1179-05	Airbus Helicopters	AS365, AS366G1, AS366GA	Paint strip.
Pitch Change Lever	365A31-1998-02	Airbus Helicopters	AS365, AS366G1, AS366GA	Replace worn/damaged stop bushing. (E1)
Pitch Change Lever	365A31-1998-02	Airbus Helicopters	AS365, AS366G1, AS366GA	Repair worn/damaged 20mm bores. (E4) (2 locations possible)
Main Transmission Case	365A32-2049-08, 365A32-2049-18, 365A32-2046-16	Airbus Helicopters	AS365, AS366G1, AS366GA	MOD 63B81 - Conversion of casings by increasing number of studs from 32 to 52.
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2045-28, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA	MOD 0763B90 - Removal and replacement of the 135mm dia. lower bushing.
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18	Airbus Helicopters	AS365, AS366G1, AS366GA	Overhaul/Return to Service (365A32-2049-XX)
Servo Support	360A32-1163-02, 360A32-1163-03, 360A32-1163-04	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Replace damaged bushings (4 sets). (E2 or Modification from -03 to -04)
Upper Scissors Link	365A31-1115-01, 365A31-1115-03, 365A31-1115-04	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul/Return to Service (includes bushing replacement, NDT, and paint)
Lower Scissors Link	365A31-1116-03, 365A31-1116-01, 365A31-1116-04	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul/Return to Service (-01 or -03 become -04).
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2046-16, 365A32-2045-28, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	MOD 0763B29 - Removal and replacement of the bushings within the servo-control attachment yokes.

Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2045-28, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Prime and paint.
Main Transmission Case	365A32-2049-07, 365A32-2049-08, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair of oil bores dia. 24.5mm (4 locations possible) (Type PE)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Replacement of oversize servo control bushings. (EZ Repair)
Main Transmission Case	365A32-2049-08, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Remove corrosion on inner yoke surfaces (Type SE).
Main Transmission Case	365A32-2049-08, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Remove corrosion on outer yoke surfaces (Type TE).
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair of worn/damaged 9.5 mm hole (E12)
Main Transmission Case	365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair of diameter(s) C and/or X (184mm dia.) (E15)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2045-28, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair damaged varnish on interior surfaces (E4)

Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair to the upper (8mm) and/or lower (10mm) lug bushings (Type BA)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair bottom 308mm diameter (Type QE)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair bottom flange 8.5mm dia. holes (20 possible) (Type HA)
Main Transmission Case	365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul/Return to Service (365A32-2046-XX)
Main Transmission Case	365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair of diameter(s) D and/or Y (114.9mm dia.) (E16)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Replace worn/damaged 62mm dia bushing (E7)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair worn/damaged 47mm bushing (E8)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair worn/damaged 10.5mm diameter hole (2 possible) (Type Y)

Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Oversize servo control bores and install oversized bushing repair. (Z Repair) (Req for Mod 0763B29 for s/n < 10000)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Fabricates oversized bushings for servo control attachment bores (for Z & EZ).
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair worn/damaged 50mm dia. (Type JE).
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Fabrication of 365A32.6522.21R1 bushing
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair worn/damaged 105mm dia (Type FA). (2 possible locations)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Replace unions, and machine mating faces (if required). (E3)
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Fabrication for P/N 365A-32.1076/DET-1703 for RP-2607-015
Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15, 365A32-2046-12, 365A32-2046-10	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair 18mm dia. oil tube bores. (Type WE) (3 locations possible)

Main Transmission Case	365A32-2049-02, 365A32-2049-06, 365A32-2049-07, 365A32-2049-08, 365A32-2049-17, 365A32-2049-18, 365A32-2046-16, 365A32-2046-15	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Replace the 135mm dia. lower bushing (E5)
Front Half Gimbal Joint	365A32-7110-00	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Remove and replace bushings (4 locations possible) (E1)
Front Half Gimbal Joint	365A32-7110-00	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Prime and Paint
Rear Half Gimbal Joint	365A32-7112-00	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Remove and replace bushings (4 locations) (E1)
Rear Half Gimbal Joint	365A32-7112-00	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Prime and Paint
Rear Half Gimbal Joint	365A32-7112-00	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Bushing fabrication for RP-3342-001 (DET-1346 and/or DET-1347)
Rear Half Gimbal Joint	365A32-7112-00	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Worn/damaged bushing bores beyond limits of RP-3342-001.
Gimbal Ring	365A32-7114-00, 365A32-7114-01	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Remove and replace bushings (4 locations possible) (E1)
Gimbal Ring	365A32-7114-00, 365A32-7114-01	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul/Return to Service
Gimbal Ring	365A32-7114-00, 365A32-7114-01	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair of cadmium plating and paint worn or missing.

Tail Rotor Pitch Control Shaft	365A33-6214.21, 365A33-6214.22, 365A33-6214.23	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair the tungsten carbide coating (E1).
Tail Rotor Pitch Control Shaft	365A33-6214.21, 365A33-6214.23	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	MOD 0765B59: Convert .21 into .23
Tail Rotor Pitch Control Shaft	365A33-6214.20, 365A33-6214.21, 365A33-6214.22, 365A33-6214.23	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Overhaul/Return to Service
Tail Rotor Pitch Control Shaft	365A33-6214.21, 365A33-6214.22, 365A33-6214.23	Airbus Helicopters	AS365, AS366G1, AS366GA, EC155	Repair the tungsten carbide coating.
Bearing	365A32-1677-00, 365A32-1677-01	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS365N3, AS366G1, AS366GA	Repair to raceways, cage plating and/or rolling elements.
Bearing	365A32-1677-00, 365A32-1677-01	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS365N3, AS366G1, AS366GA	Overhaul Inspection and Dynamic Testing
Bearing	365A32-1685-01	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS365N3, AS366G1, AS366GA	Repair to raceways, cage plating and/or replacement of rolling elements.
Scissors Drive Adapter	365A31-1171-00	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS365N3, EC155	Replacement of Adapter Bushing(s) and prime/paint (E1) (4 loc. possible)

Gimbal Ring	365A32-2111-01, 365A32-2111-02	Airbus Helicopters	AS365N, AS365N1, AS365N2, AS366G1	Overhaul/Return to Service (includes E1 bushing replacement).
Hub Body	C622A1002103, C622A1002105, C622A1002104	Airbus Helicopters	EC120	Repair of corrosion damage in Zones D, H, or I.
Hub Body	C622A1002103, C622A1002105, C622A1002104	Airbus Helicopters	EC120	Primer and paint application.
Hub Body	C622A1002103, C622A1002105, C622A1002104	Airbus Helicopters	EC120	Repair worn/damaged bushings. SEE NOTES
Non-Rotating Swashplate	C623A1001103, C623A1001102, C623A1001104	Airbus Helicopters	EC120	Repair worn/damaged 157mm bore (Type A/EA)
Non-Rotating Swashplate	C623A1001103, C623A1001102, C623A1001104	Airbus Helicopters	EC120	Prime and paint (includes E1).
Non-Rotating Swashplate	C623A1001103, C623A1001102, C623A1001104	Airbus Helicopters	EC120	Replace stirrups (E6).
Rotating Star	C623A1002102, C623A1002103, C623A1002104	Airbus Helicopters	EC120	Prime/Paint (includes E1).
Scissors Link Assembly	C623A2005102	Airbus Helicopters	EC120	Remove and replace damaged/worn bushings (E1). (4 locations possible)
Scissors Link Assembly	C623A2005102, C623A2005103	Airbus Helicopters	EC120	Overhaul / Return to Service
Scissors Link Assembly	C623A2005103	Airbus Helicopters	EC120	Remove and replace damaged/worn bushings. (E2) (4 locations possible)
Main Rotor Shaft	C632A1110102, C632A1110103, C632A1110104	Airbus Helicopters	EC120	Repair bearing journal (BA repair).
Main Rotor Shaft	C632A1110102, C632A1110103, C632A1110104	Airbus Helicopters	EC120	Sleeve replacement (E1)
Main Rotor Shaft	C632A1110102, C632A1110103, C632A1110104	Airbus Helicopters	EC120	Overhaul / Return to Service
Main Rotor Shaft	C632A1110102	Airbus Helicopters	EC120	Prime/Paint (-102)
Main Rotor Shaft	C632A1110103	Airbus Helicopters	EC120	Prime/Paint (-103)
Main Rotor Shaft	C632A1110104	Airbus Helicopters	EC120	Prime/Paint (-104 to -107)
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Remove and replace 12mm bushings (E1) (4 pairs possible)
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Remove and replace servo-control (8mm) bushings (E2) (3 pairs possible)
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Remove and replace shouldered bushings (E4)
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Remove and replace 16mm bushings (AA) (4 pairs possible)
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Prime/paint, and installation of retaining rings (E3).
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Repair of damaged or absent spacer (E5)
Tapered Case	C632A1111101	Airbus Helicopters	EC120	Fabricate bushings (DET-1421) per OEM drawing.

Input Housing	C632A2103101	Airbus Helicopters	EC120	Overhaul/Return to Service (includes bearing replacement E1).
Main Case	C632A2116-102, C632A2116-101	Airbus Helicopters	EC120	Repair of lower flange bolt holes (AA).
Main Case	C632A2116-102, C632A2116-101	Airbus Helicopters	EC120	Overhaul and return to service.
Main Case	C632A2116-101	Airbus Helicopters	EC120	Prime/paint (-101 only).
Main Case	C632A2116-102	Airbus Helicopters	EC120	Prime/paint (-102 only).
Main Case	C632A2116-102, C632A2116-101	Airbus Helicopters	EC120	Repair 76mm dia. (Type BA)
Main Case	C632A2116-102, C632A2116-101, DET-1481	Airbus Helicopters	EC120	Fabrication of DET-1481 (OEM P/N C632A2116602B1)
Lower Housing	C632A2117101	Airbus Helicopters	EC120	Overhaul/Return to Service
Lower Housing	C632A2117101	Airbus Helicopters	EC120	Repair damage in tapered pin bores. (2 locations possible).
Input Housing	C632A2181101, C632A2181102	Airbus Helicopters	EC120	Overhaul/Return to Service (includes E1/E2, NDT, prime/paint)
Chin Weight	C642A0602203, C642A0603201	Airbus Helicopters	EC120	Restore cad plating.
Tail Rotor Hub Body	350A33-3120-01	Airbus Helicopters	EC130	Overhaul / Return to Service
Pitch Change Spider	350A33-3130-00	Airbus Helicopters	EC130	Overhaul/Return to Service (includes NDT, prime/paint, and ball joint bolt replacement (E1) if required).
Tuning Chin Weight	350A33-3160-21, 350A33-3170-21	Airbus Helicopters	EC130	Repair cadmium plating and phosphate treatment
Sliding Bushing	350A33-3206-20	Airbus Helicopters	EC130	Overhaul/Return to Service (includes cad plate restoration)
Servo Control Assembly	SC8042, SC8043	Airbus Helicopters	EC130, AS355NP	Overhaul/Return to Service (O.P.)
Clamp, forward	350A41-0076-03, 350A41-0076-02	Airbus Helicopters	EC130B4	Replace worn/damaged spherical bearing.
Main Casing	350A32-3156-01	Airbus Helicopters	EC130B4, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair 72mm bore (E1)
Swashplate Assembly	355A37-1030-00	Airbus Helicopters	EC130B4, AS350B3	Overhaul/Return to Service.
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Prime and paint.

Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair upper mounting flange. (E6)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair lower mounting flange. (E7)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair upper and lower flange bolt holes (BA)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Overhaul / Return to Service
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Modify -01 to -02 by installing new pinned sleeve in 72mm bore (or repl. existing in -02)

Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair 126mm bore (E2)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair 136mm bore. (E3)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair of the 24mm bore (HA repair).
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair 80 mm Bore (Type GA)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Fabricates bushings for repair of 8mm bores

Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Replacement of 13 inferior studs with Rosan studs (E4)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair upper flange lower surface with shim. (PA/EP)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair lower flange lower surface with shim. (QA)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Repair lower flange upper surface with shim. (QA/EQ)
Main Casing	350A32-3156-01, 350A32-3156-02	Airbus Helicopters	EC130B4, EC130T2, AS350B2, AS350B3, AS350B, AS350B1, AS350BA, AS350BB	Fabricate DET-0779, DET-0780 and DET-0986.

Lower Housing	4649-201-015	Airbus Helicopters	EC135	Repair of the intermediate drive gear bearing bores.
Upper Housing	4649-201-016	Airbus Helicopters	EC135	Repair of the oil filter bypass intake area. (ASB EC135-63A-017)
Upper Housing	4649-201-016	Airbus Helicopters	EC135	Repair of the intermediate drive gear bearing bores.
Upper Housing	4649-201-016	Airbus Helicopters	EC135	Repair of the input bores. (under development)
Freewheel Shaft	4649-302-025	Airbus Helicopters	EC135	Repair of the 68 / 72 mm ID and 86 mm OD
Bevel Gear	4649-303-034	Airbus Helicopters	EC135	Repair of the shaft mating surface.
Gear Support Shaft	4649-304-026, 4649-304-044	Airbus Helicopters	EC135	Repair of the 105 mm diameter (4.135 inch).
Connecting Part	4649-306-093	Airbus Helicopters	EC135	Repair of the 46 mm seal diameter. (under development)
Connecting Part	4649-306-093	Airbus Helicopters	EC135	Repair of corrosion within the bolt holes.
Drive Shaft	4649-323-004	Airbus Helicopters	EC135	Repair of the 17 mm seal diameter. (under development)
Support/Preassy	E621M1009101, L621M1009101, L621M1009102, L621M1009205, L621M1009206	Airbus Helicopters	EC135	Overhaul/Return to Service
Sliding Sleeve Assy	L623M2006103, L623M2006102, L009M6232881, L009M6233881, L009M6234881, L623M2006101	Airbus Helicopters	EC135	Overhaul/Return to Service
Sliding Sleeve Assy	L623M2006103, L623M2006102, L009M6232881, L009M6233881, L009M6234881, L623M2006101	Airbus Helicopters	EC135	Replace worn/damaged ball bearings. (2 possible)
Sliding Sleeve Assy	L623M2006103, L623M2006102, L623M2006101	Airbus Helicopters	EC135	Remove worn/damaged flanged bearing sleeves (2 possible)
Sliding Sleeve Assy	L623M2006103, L623M2006102, L623M2006101	Airbus Helicopters	EC135	Replace worn/damaged bolt(s).
Sliding Sleeve Assy	L623M2006103, L623M2006102, L623M2006101	Airbus Helicopters	EC135	Replace worn/damaged Teflon sleeves
Helical Tube	L623M4002104	Airbus Helicopters	EC135	Overhaul / Return to Service
Helical Tube	L623M4002104	Airbus Helicopters	EC135	Removal and replacement of the bushings.
Helical Lever Assembly	L623M4003101, L623M4003102	Airbus Helicopters	EC135	Remove and replace spherical bearing.
Helical Lever Assembly	L623M4003101, L623M4003102	Airbus Helicopters	EC135	Overhaul / Return to Service
Helical Lever Assembly	L623M4003101, L623M4003102	Airbus Helicopters	EC135	Remove and replace flanged bushings.
Tail Rotor Pitch Change Spider	L642A2004101	Airbus Helicopters	EC135	Overhaul - includes removal & replacement of elliptical bushings
Bushing, Chin Weight	L642A2017603, L023A0642221, L642A2035201, L642A2021201, L642A2018601	Airbus Helicopters	EC135	Repair damaged cad plating.
Shaft Long Assy	L651M2008101	Airbus Helicopters	EC135	Overhaul/Return to Service
Cyclic Lever	L671M3011101, L671M3011103, L671M3011102	Airbus Helicopters	EC135	Overhaul/Return to Service
Cyclic Lever	L671M3011101, L671M3011103, L671M3011102	Airbus Helicopters	EC135	Replace worn/damaged large bushing(s).

Forked Lever Assy.	L671M3012102	Airbus Helicopters	EC135	Overhaul/Return to Service
Bearing Block	L671M3013101, L671M3013102	Airbus Helicopters	EC135	Overhaul/Return to Service (includes bearing replacement)
Fan Shaft	L792M3004-229	Airbus Helicopters	EC135	Repair the seal diameter (Diameter A). (under development)
Main Transmission Case		Airbus Helicopters		Repair of the upper surface of the upper mounting flange.
Swashplate Guide		Airbus Helicopters		Remove and replace cracked/sheared rivets
Upper Rotor Mast Housing		Airbus Helicopters		Repair of Seal Diameter (160mm dia)